

User's Guide for Nokia 3125

Copyright ©2004 Nokia. All rights reserved.

Nokia, Nokia 3125, Xpress-on, Pop-Port, Nokia Connecting People, and the Nokia Original Enhancements logos are trademarks or registered trademarks of Nokia Corporation. Other company and product names mentioned herein may be trademarks or trade names of their respective owners.

US Patent No 5818437 and other pending patents. T9 text input software
Copyright ©1999-2004. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from
RSA Security.



Java is a trademark of Sun Microsystems, Inc.



The information contained in this user guide was written for the Nokia 3125 product. Nokia operates a policy of ongoing development. Nokia reserves the right to make changes to any of the products described in this document without prior notice.

UNDER NO CIRCUMSTANCES SHALL NOKIA BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, AND CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS." EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY AND RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

Export Controls

This device may contain commodities, technology or software that may only be exported in accordance with the U.S. Export Administration regulations. Diversion contrary to U.S. or Canadian law is prohibited.

Issue 1

Contents

For your safety.....	vii	Answer or silence an incoming call.....	10
Welcome.....	ix	Answer a call with the keypad	
About your device.....	ix	locked.....	10
Network services.....	ix	Adjust the earpiece volume.....	10
Shared memory.....	ix	Using the loudspeaker.....	10
Get help.....	x	Options during a call.....	10
Find your phone label.....	x	Keyguard.....	11
Updates.....	x		
1. Nokia 3125 phone at a glance	1	3. Text entry.....	12
The standby mode.....	2	Standard mode.....	12
Quick keys.....	2	Text (Abc).....	12
Indicators and icons.....	2	Numbers (123).....	12
Get the most out of this guide.....	3	Punctuation and special characters.....	12
Phone menus.....	3	Dictionary mode.....	12
User interface features.....	3	Activate/deactivate.....	13
The scroll method.....	4	Text entry.....	13
Shortcuts.....	4		
Shortcut keys.....	4	4. Messages.....	14
In-phone help.....	4	Text messages.....	14
		Write and send.....	14
2. Set up your phone.....	6	Templates.....	14
Antenna.....	6	Options.....	15
Battery.....	6	Read and reply.....	16
Remove the back cover.....	6	Change sending options.....	16
Remove the battery.....	6	Change settings.....	16
Replace the battery.....	7	Distribution lists.....	17
Replace the back cover.....	7	Send a message.....	17
Charge the battery.....	7	Options.....	17
Turn your phone on or off.....	7	Text message folders.....	18
Connect the headset.....	8	Save messages to folders.....	18
Change the Xpress-on™ covers.....	8	View saved messages.....	18
Remove the back cover.....	8	Delete text messages.....	19
Remove the front cover.....	8	A single message.....	19
Install the keymat and front cover..	9	All messages in a folder.....	19
Replace the back cover.....	9	Multimedia messages.....	19
Make a call.....	9	Write and send.....	20
Using the keypad.....	9	Options.....	20
Using the contacts list.....	9	Read and reply.....	21
Using the last dialled number.....	10	Options.....	22
Answer calls.....	10	Settings.....	23
		Multimedia message folders.....	23
		Delete text or multimedia messages..	24

A single message.....	24
All SMS messages in a folder.....	24
All MMS messages in a folder.....	25
Voice messages.....	25
Save voice mailbox number.....	25
Call and setup your voice mail.....	25
Listen to your voice messages.....	25
Clear voicemail icon.....	26
Automate voice mail.....	26
Write down voice mailbox number and process.....	26
Insert dialling codes.....	26
Setup voice mail with dialling codes.....	27
Minibrowser messages.....	27

5. Call register 28

View missed calls.....	28
View received calls.....	28
Dialled numbers.....	29
Time of call.....	29
Delete call registers.....	29
Duration of calls.....	29
Last call.....	29
Dialled calls.....	29
Received calls.....	29
All calls.....	30
Life timer.....	30
Clear all timers.....	30
Duration of data/fax calls.....	30
Duration of minibrowser calls.....	30

6. Contacts 32

Add new contacts.....	32
Save a name and number.....	32
Save (only) a number.....	32
Save an entry.....	32
Save multiple numbers and text items.....	32
Set up voice tags.....	33
Caller groups.....	33
Setup a group.....	33
Options.....	33
Set up speed dialling.....	33
Assign a key to speed dialling.....	33

Change speed dialling numbers....	34
Delete speed dialling numbers.....	34
Edit contacts list entries.....	34
Delete contacts list entries.....	35
View Contacts.....	35
Search for a name.....	36
Configure settings.....	36
Send and receive contacts (business cards).....	36
Send a business card.....	37

7. Organiser 38

Alarm clock.....	38
Set an alarm.....	38
Change the time.....	38
Set the alarm tone.....	38
Repeat an alarm.....	38
Alarm conditions.....	39
Turn an alarm off.....	39
Calendar.....	39
Open.....	39
Go to a date.....	39
Note a specific date.....	39
View notes (day view).....	40
Options while viewing a list of notes.....	40
Send a note.....	41
Receive a note.....	41
View notes.....	41
Save notes.....	41
Discard notes.....	41
The To-do list.....	42
Add a To-do note.....	42
Options while viewing To-do notes.....	42
Calculator.....	42
Currency converter.....	42
Edit the exchange rate.....	43
Countdown timer.....	43
Set the countdown timer.....	43
Change the time.....	43
Stop the timer before the alarm sounds.....	44
Stopwatch.....	44
Measure time.....	44

Measure split time.....	44	Change the format.....	53
Measure lap time.....	44	Date.....	53
Save the time.....	45	Show/hide the date.....	53
Options.....	45	Set the date.....	54
Operation note.....	45	Change the date format.....	54
Calorie counter.....	45	Set the auto-update of date & time.....	54
Save personal data.....	45	Display settings.....	54
Select an activity.....	45	Choose a wallpaper.....	54
Edit and delete activities.....	46	Choose a colour scheme.....	55
8. Settings	47	Screen saver.....	55
Profiles.....	47	Choose a menu view.....	55
Activate.....	47	Set the display brightness.....	55
Personalise a profile.....	47	Backlight time-out.....	55
Set a timed profile.....	47	Tone settings.....	55
Personal shortcuts.....	48	Enhancement settings.....	56
Choose 'Go to' functions.....	48	Headset.....	56
Organise functions.....	48	Handsfree.....	56
Call settings.....	48	Loopset.....	56
Anykey answer.....	48	Charger.....	56
Automatic redial.....	49	Security settings.....	57
Speed dialling.....	49	Phone Lock.....	57
Automatic update of service.....	49	Activate or deactivate phone lock... ..	57
Calling card.....	49	Allow numbers when phone locked.....	57
Save information.....	49	Change lock code.....	58
Make calls.....	50	Call Restrictions.....	58
International prefix.....	50	Voice privacy.....	59
Data/fax calls.....	50	Network.....	59
Data transfer.....	51	Network services.....	59
Call summary.....	51	Call diverting.....	59
Phone settings.....	51	Activate.....	60
Set the language.....	51	Cancel.....	60
Use automatic keyguard.....	51	Call waiting.....	60
Set DTMF tones.....	52	Send own caller ID when calling.....	60
Set type.....	52	Store a feature code.....	61
Set fixed length.....	52	View your own phone number.....	61
Start-up tone.....	52	Restore factory settings.....	61
Create a welcome note.....	52	9. Voice	62
Choose a banner.....	53	Voice dialling.....	62
Activate Help text.....	53	Assign a voice tag to an entry.....	62
Time and date settings.....	53	Dial a number.....	62
Time.....	53	Options.....	63
Show/hide the clock.....	53	Play back.....	63
Set the time.....	53	Change.....	63

Delete.....	63	13.Applications	70
Voice commands.....	63	Launch.....	70
Add a voice tag.....	63	Downloads.....	70
Activate a voice command.....	63	Application downloads.....	70
Options.....	64	Installing Java applications.....	71
Voice recorder	64	Memory status	71
Record speech or sound.....	64	14.Go To	72
Options.....	64	15.PC Suite	73
10.Gallery	66	16.Enhancements	74
Open the gallery	66	17.Reference information.....	75
View folders	66	Batteries and chargers.....	75
Play a video clip.....	66	Care and maintenance	77
11.Games	67	Additional safety information...	78
Play a game.....	67	Index.....	82
Game settings	67		
Game options	67		
12.Minibrowser	68		
Mobile internet access.....	68		
Sign on to the mobile internet.....	68		
Navigate the mobile internet.....	69		
Phone keys.....	69		
To end a data connection and make a phone call.....	69		
Make an emergency call while online.....	69		
Clear the cache and disconnect	69		

For your safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.



SWITCH ON SAFELY

Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



INTERFERENCE

All wireless phones may be susceptible to interference, which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the phone off near medical equipment.



SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.



SWITCH OFF WHEN REFUELING

Don't use the phone at a refuelling point. Don't use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Follow any restrictions. Don't use the phone where blasting is in progress.



USE SENSIBLY

Use only in the normal position as explained in the product documentation. Don't touch the antenna unnecessarily.



QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.



WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.



BACKUP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.



CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



EMERGENCY CALLS

Ensure the phone is switched on and in service. Press the **End** key as many times as needed to clear the display and return to the main screen. Enter the emergency number, then press the **Talk** key. Give your location. Do not end the call until given permission to do so.

Welcome

Congratulations on your purchase of the Nokia 3125 mobile phone. Your phone provides many functions which are practical for daily use, such as a hands-free loudspeaker, voice recorder, video playback, text and multimedia messaging, an alarm clock, calculator, calendar, and more. Your phone can also connect to a PC, laptop, or other device using a data cable. To personalise your phone, you can set your favourite ring tones, wallpapers, and animated screen savers, create a personalised Go-to menu, and attach Xpress-on™ colour covers.

■ About your device

The wireless phone described in this guide is approved for use on the CDMA 800 network. Contact your service provider for more information about networks.

When using the features in this device, obey all laws and respect privacy and legitimate rights of others.



Caution: To use any features in this device, other than the alarm clock, the phone must be switched on. Do not switch the device on when wireless phone use may cause interference or danger.

■ Network services

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilise network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear in your device menu. Contact your service provider for more information.

■ Shared memory

The following features in this device may share memory: contacts, text and multimedia messages, images, graphics, tones, video, and recordings in gallery, calendar and

To-do notes, games, and applications. Use of one or more of these features may reduce the memory available for the remaining features sharing memory. Your phone may display a message that the memory is full when you try to use a shared memory feature. In this case, delete some of the information or entries stored in the shared memory features before continuing. Some of the features, such as text and multimedia messages, images, graphics, tones, video, and recordings in gallery, and applications may have a certain memory specially allotted to them in addition to the memory shared with other features.


■ Get help

Find your phone label

If you need help, Nokia Customer Care is available for assistance. Before calling, we recommend that you write down the following information and have it available:

- Electronic serial number (ESN)
- Your zip code


The ESN is found on the type label, which is located beneath the battery on the back of the phone. See [Remove the back cover, 6](#) and [Remove the battery, 6](#) for more information.

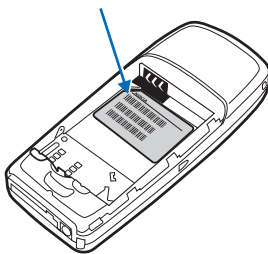

Updates


From time to time, Nokia updates this guide to reflect changes. The latest version may be available at www.nokia-asia.com.

1. Nokia 3125 phone at a glance

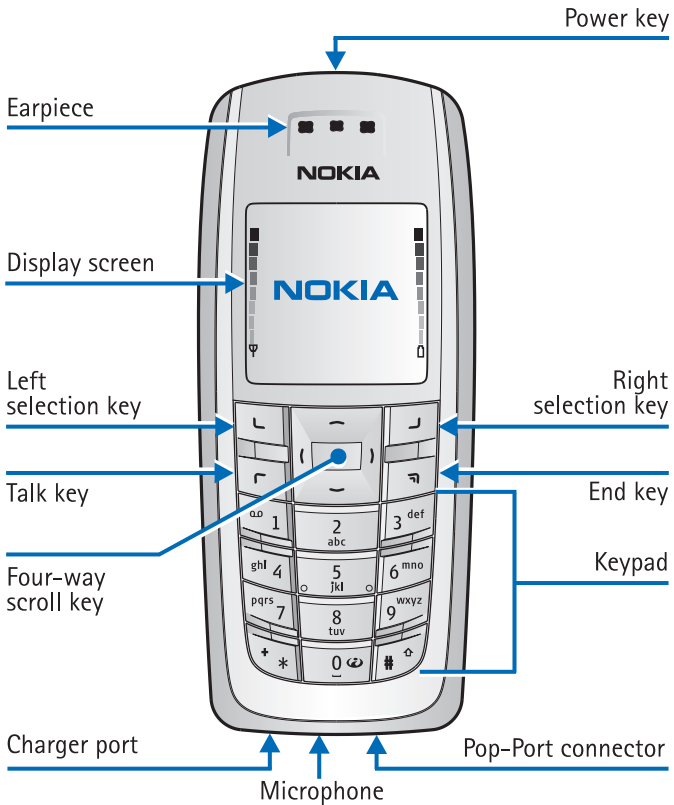

■ The standby mode

The standby mode is home base and indicates your phone is in idle mode.

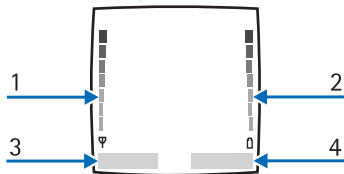

Signal strength (1)—A higher bar indicates a stronger network signal.

Battery level (2)—A higher bar indicates more power in the battery.

Menu (3)—Press the Left selection key to select this option.

Contacts or *Go to* (4)—Press the Right selection key to select this option.

■ Quick keys


At the standby mode, the Four-way scroll key instantly takes you to frequently-accessed menus:


- Scroll up key—View contacts.
- Scroll right key—View the calendar.
- Scroll down key—View contacts.
- Scroll left key—Write a text message.

■ Indicators and icons


Depending on your wireless service provider, your phone may support some of the following indicators and icons:


 You have new text or picture messages. See [Read and reply, 16](#).


 You have new multimedia messages. See [Multimedia messages, 19](#).


 You have attached a picture to a text or multimedia message. See [Options, 20](#) and [Options, 22](#).


 You have new voice messages. See [Voice messages, 25](#).


 Your phone's keypad is locked. See [Keyguard, 11](#).


 Your phone is set to the Silent profile. See [Profiles, 47](#).



 The alarm clock is On. See [Alarm clock, 38](#).



 The countdown timer is running. See [Countdown timer, 43](#).


 The stopwatch timer is running in the background. See [Stopwatch, 44](#).

 Integrated hands-free speaker is active. See [Using the loudspeaker, 10](#).

 The timed profile is selected. See [Profiles, 47](#).

 or  An enhancement is connected to the phone. See [Enhancement settings, 56](#).

 or  Voice privacy encryption is active (or is not active) in the network. See [Voice privacy, 59](#).

 You are in a digital network. See [Network services, ix](#).

 You are in a 1XRTT network. See [Network services, ix](#).

■ Get the most out of this guide

The following sections illustrate the various components of your phone. Familiarise yourself with these sections to help you understand the instructions that follow.

This guide uses certain terms for the steps that you are asked to perform.

- **Press** means to press and release a key quickly. For example, press the **7** key means press the key on the keypad that is labeled with the number 7 and letters "pqrs".
- **Press and hold** means to press and hold a key for 2–3 seconds; then release the key.
- **Selection keys** are used to select a menu option. To select an option, press the selection key below the menu item on the phone screen.
- **Scroll keys** are used to move up, down, left, or right in the menus.
- **Talk and End keys:** Press the **Talk** key to place a call or to answer an incoming call. Press the **End** key to end a call or press and hold to return to the standby mode.

■ Phone menus

Phone features are grouped according to function and are accessed through the main menus. Each main menu contains submenus and lists from which you can select or view items and personalise your phone features. You can access these menus and submenus by using the scroll method or by using a shortcut.




Note: Some features may not be available, depending on your network. For more information, contact your wireless provider.

User interface features


You can choose from two types of menu interface: *List* and *Grid*. See [Choose a menu view, 55](#) for more information.

In the *List* interface, full-color, animated images introduce the menu. Use the **Scroll up** and

Scroll down keys to navigate through the menus. The menu icons shown in this user guide represent the *List* interface icons.

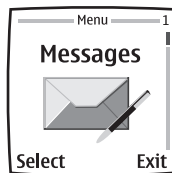

In the *Grid* interface, multiple menu icons appear on a single display. Use the *Four-way scroll* keys to navigate through the icons.

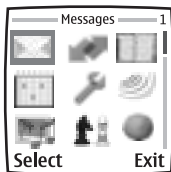

The scroll method

1. At the standby mode, select *Menu* and scroll through the main menus using the up and down *Four-way scroll* key.

As you scroll through the menus, the menu number appears in the upper right corner of the display. Below the number is a scroll bar with a tab that moves up or down on the right side of the display screen as you scroll through the menus, providing a visual representation of your current position in the menu structure.



2. When you arrive at a menu, press *Select* (the *Left selection* key) to enter submenus.
 - Press *Back* (the *Right selection* key) to return to the previous menu.
 - Press the *End* key to return to the standby mode from any menu or submenu.

Shortcuts

You can go directly to almost any menu or submenu, as well as activate most features, by using a shortcut.

At the standby mode, select *Menu*; then within 3 seconds, press the key or keys associated with the menu function you would like to view or activate.

For example, to go directly to the calculator, select *Menu* 4-4 from the standby mode (*Menu* > 4*Organiser* > 4*Calculator*). After a brief pause, the calculator opens.

Shortcut keys

The arrows keys and the zero key also have menu shortcuts.

- Press the Scroll left key to go to the SMS text editor.
- Press the Scroll right key to view the monthly calendar.
- Press the Scroll up or Scroll down arrow keys to see a list of names in *Contacts*.
- A long press of the zero key launches the browser.

In-phone help

Many features have brief descriptions (help text) which can be viewed on the display. To view these descriptions, scroll to a feature and wait for about 10 seconds. Press

More to view all of the description, or press *Back* to exit.

In order to view the descriptions, you must first activate help text.

1. At the standby mode, select *Menu > Settings > Phone settings > Help text activation*.
2. Scroll to *On* or *Off* and press *Select*.

2. Set up your phone

■ Antenna

Your device has an internal antenna located towards the top of the phone. Hold the phone as you would any other telephone with the antenna area pointed up and over your shoulder.




Note: As with any other radio transmitting device, do not touch the antenna unnecessarily when the device is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed. Avoiding contact with the antenna area when operating the phone optimises the antenna performance and the battery life.



■ Battery

Always switch the device off, and disconnect the charger before removing the battery.


Remove the back cover

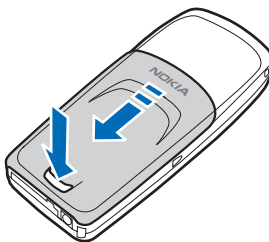


1. With the back of the phone facing you, push down on the back cover release button.
2. Slide and lift the bottom of the back cover to remove.

Remove the battery

After you have removed the back cover, insert your finger into the finger grip, and lift the battery from its compartment.

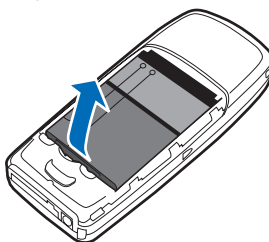


Replace the battery

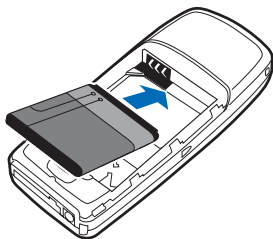


1. Position the battery so the gold-coloured contacts match up with those on the phone.
The battery label should be facing away from the phone.
2. Insert the battery, gold-coloured contact end first, into the battery slot.
3. Push down on the other end of the battery to snap the battery into place.

Replace the back cover

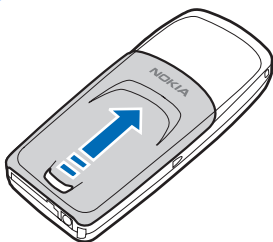

1. Place the back cover just below its locked position on the back of the phone.
2. Slide the back cover toward the top of the phone to lock the cover into place.

Charge the battery

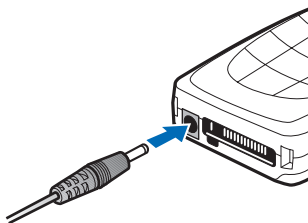


1. Plug the charger transformer into a standard ac outlet.
2. Insert the charger output plug into the round jack at the bottom end of the phone.

After a few seconds, the battery indicator in the display starts to scroll from bottom to top. If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

■ Turn your phone on or off


To turn your phone on or off, press and hold the Power key on top of the phone for at least 3 seconds.

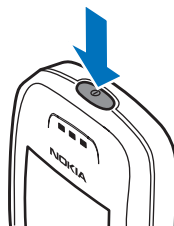


■ Connect the headset

A compatible headset may be purchased with your phone or separately as an enhancement. (See [Enhancements, 74](#) for information.)

1. Plug the headset connector into the Pop-Port™ connector at the bottom end of your phone.

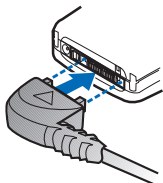

2. Position the headset on your ear. The  icon appears on the standby mode.

With the headset connected, you can make, answer, and end calls as usual.

- Use the keypad to enter numbers.
- Press the Talk key to place a call.
- Press the End key to end a call.

■ Change the Xpress-on™ covers




Note: Before removing the cover, always switch off the power, and disconnect the charger and any other device. Avoid touching electronic components while changing the covers. Always store and use the device with the covers attached.

Remove the back cover


See [Remove the back cover, 6](#) for instructions on removing the back cover. You do not need to remove the battery when changing phone covers.

Remove the front cover

Gently pull the bottom of the front cover away from the rest of the phone and remove.

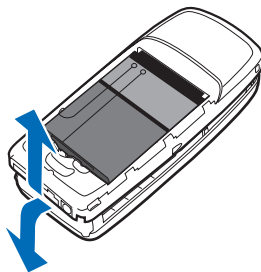


Install the keymat and front

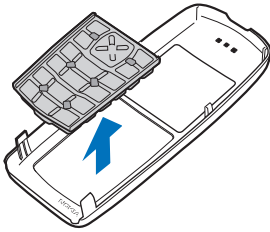


cover

1. Remove the keymat from the old front cover, and place it into the new front cover as shown.

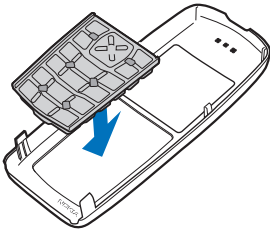


2. Press the front cover and keymat against the phone, and snap the front cover into place.

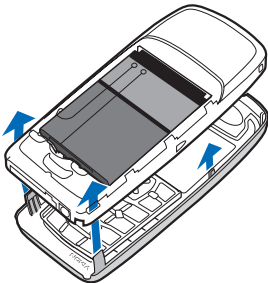

Replace the back cover

See [Replace the back cover, 7](#) for instructions on replacing the back cover.

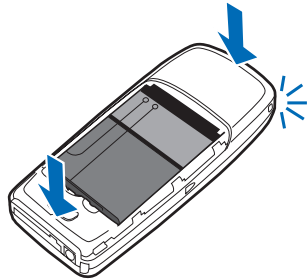

■ Make a call

Using the keypad

1. Enter the phone number (including the area code), and press the Talk key. (To delete a character to the left of the cursor, press *Clear*.)
2. Press the End key to end the call or *End call* to cancel the call attempt.

Using the contacts list

1. At the standby mode, use the Scroll up or Scroll down keys to scroll to the entry you wish to view.
2. Press the Talk key to make the call, or press *Details* to view details of the entry.

See [Contacts, 32](#) for more information on using the contacts list.

Using the last dialled number

1. At the standby mode, press the **Talk** key to display the last 20 numbers dialled.
2. Scroll to the number (or name) you wish to redial, and press the **Talk** key.

■ Answer calls

Answer or silence an incoming call

1. Press the **Talk** key to answer the call.
2. Press the **End** key or *Silence* to mute the ringing tone; then press *Answer* to answer the call, or do nothing, and the call is eventually diverted to voicemail.

Answer a call with the keypad locked

To answer a call with the keypad locked, simply press the **Talk** key. During the call, all features function as normal. When you end the call or do not answer it, the keypad automatically re-locks. See [Keyguard, 11](#) for more details.

When the phone is locked, calls still may be possible to the official

emergency number programmed into your phone.

Adjust the earpiece volume

While in a call, press the **Scroll right** or **Scroll left** keys to adjust the volume of the earpiece.

When adjusting the volume, a bar chart appears in the display indicating the volume level.

Using the loudspeaker

You can use your phone as a loudspeaker during a call. Do not hold the phone to your ear during the loudspeaker operation.

- To activate the loudspeaker, press *Loudsp.*
- To deactivate the loudspeaker during a call, press *Handset*.

The loudspeaker is deactivated automatically when a call (or a call attempt) ends or when certain enhancements are connected.

Options during a call


Many of the options that you can use during a call are Network Services. Check with your wireless service provider for more information.

1. Press *Options* during a call to display a list of options available during a call.

2. Scroll to an option, and press *Select* to activate the option or enter its submenu.

■ Keyguard

With keyguard, you can lock the keypad to prevent keys from being pressed accidentally. Remember to lock your phone keypad to prevent accidental calls. If the keypad is locked, it unlocks when you receive a call. After the call, the lock automatically reactivates.

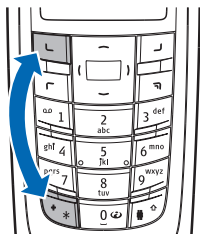

When the keyguard is on, calls still may be possible to the official emergency number programmed into your phone. Key in the emergency number and press the Talk key.

To lock the keypad, select *Menu* with the Left selection key; then press the * key within two seconds.

To unlock the keypad, select *Unlock* with the Left selection key; then press the * key within two seconds.

3. Text entry

You can use two methods for entering text and numbers:

- Standard mode is the only way to enter text into the contacts list or rename caller groups.
- Dictionary mode is a quick and easy method for writing messages, creating a calendar note, or making a To-do list.

■ Standard mode

Text (Abc)

- Press a key once to insert the first letter on the key, twice for the second letter, etc. If you pause briefly, the last letter in the display is accepted and your phone awaits the next entry.
- Press the 0 key to enter a space, thereby accepting a completed word.
- Press the 1 key to enter a period (.).
- Press the * key to display special characters.
- Press the * key twice to display smiley face characters.
- Press and hold the # key to bring up the *Editor settings* (*Number mode*, *Dictionary on/Dictionary off*, *Writing language*).

Numbers (123)

To switch to 123 mode from Abc mode, press and hold the # key at any message entry screen to bring up the *Editor settings* menu list of *Number mode*, *Dictionary on*, and *Writing language*. Select *Number mode*, and the phone will return to the message entry screen and switch the ABC icon in the upper left corner of the display to 123 icon.

- Press *Clear* to backspace the cursor and delete a character
- Press and hold *Clear* to backspace continuously and delete characters

Punctuation and special characters

While at any text entry screen, press the * key to display special characters (press and hold the * key if the dictionary is on). You can navigate through the list of special characters by using the **Four-way scroll** key. Once a character is highlighted, press *Insert* to insert the character into your message.

■ Dictionary mode

Dictionary input allows you to write messages quickly using your keypad and the built-in dictionary. It is

much faster than the standard mode method, because for each letter, you only press the corresponding key on your keypad once.

Activate/deactivate

At any text entry screen, press and hold *Options*. The dictionary is turned on and off, depending on its previous mode.

OR

At any text entry screen, select *Options > Dictionary on*.

OR

Press and hold the # key to bring up the *Editor settings* menu and select *Dictionary on*.

Text entry


The illustration below simulates your display each time a key is pressed. For example, to write Nokia with the dictionary on and with the English dictionary selected, press each of the following keys once:


the 6 key the 6 key the 5 key the 4 key the 2 key





- Press the 0 key to enter a space, and begin writing the next word.
- If a displayed word is not correct, press the * key to see other matches. To return to the previous word in the list of matches, press *Previous*.


- If ? appears after a word, press *Spell* to add the word to the dictionary.
- Press the 1 key to insert a period into your message.
- Press and hold the * key to display special characters; then press the * key again to cycle through all available characters, including smiley face characters.
- Press the # key to switch the dictionary on or off and to use the dictionary in various modes. As you press the # key, the following icons (not the descriptions) appear in the upper left of the display screen:

 Uppercase text:
standard mode is on

 Lowercase text:
standard mode is on

 Sentence case text:
standard mode is on

 Sentence case text:
dictionary mode is on

 Lowercase text:
dictionary mode is on

4. Messages



If you have subscribed to a messaging service through your wireless provider, you can send and receive messages to compatible phones that also subscribe to a compatible message service. You may also be able to send and receive picture messages, multimedia messages that contain sounds or video clips, and e-mail messages.



Note: When sending messages, your device may display *Message sent*. This is an indication that the message has been sent by your device to the message center number programmed into your device. This is not an indication that the message has been received at the intended destination. For more details, about messaging services, check with your service provider.

■ Text messages

Write and send

1. At the standby mode, select *Menu > Messages > Text messages > Create message*.

To go quickly to the *Create message* display, press the **Scroll left** key from the standby mode.

After a brief pause, the message entry screen appears in the display.

2. Compose a message using the keypad and press *Options*.
3. Select *Send to > Send to number, Send to e-mail, Send to many* or *Send to distrib. list*.
Send to distrib. list option appears only if a distribution list has been created. See [Distribution lists, 17](#).
4. Enter the recipient's phone number or e-mail address, or press *Search* to retrieve a number from your contacts list, and press *Send*.

Templates

Templates are short, prewritten messages which can be recalled and inserted into new text messages when you are short on time.

1. At the standby mode, select *Menu > Messages > Text messages > Create message*.
2. Select *Options > Use template*.
3. Scroll to one of the available templates, and press *Select*.

- Enter the text into your new message, and select *Options* > *Send to* > *Send to number*, *Send to e-mail*, *Send to many* or *Send to distrib. list*.
Send to distrib. list option appears only if a distribution list has been created. See [Distribution lists, 17](#).
- Enter the recipient's phone number or e-mail address, or press *Search* to retrieve an entry from your contacts list, and press *Send*.

Options

When you create a text message, depending on the mode of text input you are using and the features supported by your wireless service provider, some or all of the following options are available:

- Send to*—Choose *Send to number*, *Send to e-mail*, *Send to many* or *Send to distrib. list* to send the message to one or more recipients. (*Send to distrib. list* option appears only if a distribution list has been created. See [Distribution lists, 17](#).)
- Preview*—View the picture message before sending it.
- Sending options*—Set the priority of the message, choose to receive a delivery note when a message is sent, or to send a callback number.
- Clear text*—Erase the text from the message editor.

Insert picture—Insert a picture from the predefined templates.

Change picture—Insert a different picture from the predefined templates.

Delete picture—Remove a picture from the message.

Insert contact—Insert a name from your contacts list into your message.

Insert number—Insert a phone number or find a phone number in the contacts list.

Save message—Select *Drafts* to save the message in your archive; select *Template* to save the message as one of your predefined templates.

Exit editor—Automatically saves the message to the Drafts folder and exits the message editor.

Use template—Insert a predefined template into your message.

Insert smiley—Insert the smiley face of your choice into your message.

Insert word—Enter the text of a new word that might not appear in the dictionary.

Edit word—Edit the text of a new word that might not appear in the dictionary.

Insert symbol—Insert a special character into your message.

Matches—View matches found in the dictionary for the word you want to use.

Dictionary on/Dictionary off—Turn the dictionary on or off.

Writing language—Choose the language of the text editor.

Read and reply

When you receive a message, your phone beeps, and *1 message received* and the unopened letter icon (✉) appear in the display.

When you have unopened messages in your *Inbox*, ✉ is shown in the upper left corner of the standby mode as a reminder.

1. Press *Show* to read the message, or *Exit* to dismiss the notification.

Use the **Scroll up** key or the **Scroll down** key to view the whole message if necessary.

2. Select *Options > Reply*.
3. Select a *Reply*: option; then compose your reply using the keypad.
4. Select *Options > Send*.

When you read a text message, the following options are available:

Delete—Discard the message.

Reply—Reply to the message. Create the message, and press *Options > Send*. The sender's phone number or e-mail is used as the default

Use number—Choose *Save*, *Add to contact*, *Send message*, or *Call*.

Save—Save the message to a folder.

Forward—Forward the message to another phone number.

Rename—Edit the title of the message.

When you reply to a text message, your options are the same as when creating a message. See [Options, 15](#) for more information.

Change sending options

1. At the standby mode, select *Menu > Messages > Text messages > Message settings > Sending options*.
2. Select the setting you wish to change:

Priority—Set the priority of the note as *Urgent* or *Normal*, and press *Select*.

Delivery reports—A note is sent to you confirming delivery of the message. Scroll to *On* or *Off*, and press *Select*.

Send callback number—A callback number is sent to the recipient. Scroll to *Off* or your phone number, and press *Select*.

Change settings

When the message memory is full, your phone cannot send or receive any new messages. However, you can set your phone to automatically replace old messages in the *Inbox* and *Outbox* folders when new ones arrive.

1. At the standby mode, select *Menu > Messages > Text messages > Message settings > Other settings.*
2. Select the setting you wish to change:
 - Message font size*—Scroll to *Small font* or *Large font*, and press *Select*.
 - Message overwriting*—Scroll to *Sent items only*, *Inbox only*, *Sent items & Inbox*, or *Off*, and press *Select*.
 - Save to sent items as sending*—Scroll to *Always save*, *Always prompt*, or *Off*, and press *Select*.
 - Queue msgs. when digital unavailable*—Scroll to *On*, *On prompt*, or *Off*, and press *Select*.
5. Highlight the contact you want to add to the distribution list and press *Select*.
6. Highlight the phone number you want to add and press *Select*.
Repeat steps 4–6 to add additional contacts to the distribution list.

Send a message

To send a message to all contacts in a created distribution list:

1. At the standby mode, select *Menu > Messages > Text messages > Create message.*
After a brief pause, the message entry screen appears in the display.
2. Compose a message using the keypad and press *Options*.
3. Select *Send to > Send to distrib. list.*
4. Highlight the distribution list you are sending to and press *Select > OK*.

Distribution lists

You can send a text message to multiple recipients at one time. First, you must create a distribution list using the entries in your contacts list.

1. At the standby mode, select *Menu > Messages > Text messages > Distribution lists.*
2. Select *Options > Add list.*
3. Enter the name of the list and press *OK*.
4. With the list highlighted, select *Options > View list > Add contact.*
1. At the standby mode, select *Menu > Messages > Text messages > Distribution lists.*
2. Highlight a distribution list and select *Options*.
3. Scroll to an option and press *Select* to enter a submenu: *Add list*—Create a distribution list using your contacts list.

Options

View list—View the list of contacts or numbers in a distribution list that you have created.

Send message—Send a text message to the distribution list selected.

Rename list—Rename a distribution list that you have created.

Clear list—Delete the contacts or numbers from a distribution list that you have created.

Delete list—Delete a distribution list that you have created.

■ Text message folders

Save messages to folders

You can save sent or received messages to an existing folder or to a folder that you have created.

1. Open the received message or create a new message, and press **Options**.
2. Select **Save message** and scroll to the folder available:

Sent items—Messages that have been sent by the network are automatically stored in the **Sent items** folder.

Drafts—Messages that you create can be stored in the **Drafts** or **Templates** folder.

Archive—Store messages that have been read in the **Archive** folder.

Templates—Prewritten templates are stored in the **Templates** folder. You can also save received messages in the **Templates** folder to use as templates. Preloaded and saved templates can be edited and customized.

My folders—Keep your messages organized by creating custom folders and saving some of your messages there. Select **Options > Add folder** to add a custom folder. You can also select **Options > Rename folder** or **Options > Delete folder** to rename or delete a folder you have created.



Note: Only folders created in **My folders** can be deleted. The **Inbox**, **Outbox**, **Sent items**, **Drafts**, **Archive**, and **Templates** folders are protected. When you delete a folder, all messages in the folder are also deleted.


View saved messages

1. At the standby mode, select **Menu > Messages > Text messages**.
2. After a brief pause, scroll to the folder containing the message

you wish to view and press *Select*.

3. Once the folder opens, scroll to the message you wish to view, and press *Select*.

■ Delete text messages

If your text message memory is full and you have more messages waiting at the network,  blinks on the start screen.

You can do the following:

- Read some of the unread messages, and delete them.
- Delete messages from some of your folders.

A single message

To delete a single message, you need to open it first.

1. At the start screen, select *Menu > Messages > Text messages*.
2. Scroll to the folder containing the message you wish to delete, and press *Select*.
3. Scroll to the message you wish to delete, and press *Select*.
4. Select *Options > Delete message*.
5. Press *OK* to delete the message or *Back* to exit.

All messages in a folder

1. At the start screen, select *Menu > Messages > Text messages > Delete messages*.
2. Scroll to the folder containing the messages you wish to delete, and press *Select*:
 - All*—Deletes all messages in the folder you choose.
 - All read*—Deletes all read messages in the folder you choose.
 - All unread*—Deletes all unread messages in all of the folders.
3. Press *OK* to empty the folder.

■ Multimedia messages

A multimedia message (MMS) is a network service. If your wireless service provider supports this feature, then an MMS can be created in SMIL presentation format. SMIL presentation format means that MMS can hold multiple slides each containing 1 image, 1 sound clip, and text, or a single slide that contains video and text only. If supported by your wireless service provider, you may also be able to receive business cards and calendar notes. Maximum MMS size is reached at 100 KB. If the maximum size is exceeded, the phone may not be able to send or receive the message. Once you save the MMS, you can play back the video clip, use

the image as a screen saver, or use the sound as a ringing tone. In some networks, you may receive a message that includes an internet address where you can view the multimedia message.



Note: Only devices that offer compatible multimedia message or e-mail features can receive and display multimedia messages. Multimedia message objects may contain viruses or otherwise be harmful to your device or PC. Do not open any attachment if you are not sure of the trustworthiness of the sender.



Note: When your phone is dedicated to a call in progress, an application (such as a game), or an active web browser connection, the phone cannot receive multimedia messages.

The default setting of the multimedia message service is generally on.

Multimedia messaging supports JPEG, GIF, PNG, AGIF, BMP and WBMP picture formats; MIDI, SP-MIDI and monophonic ringing tones; QCELP and AMR audio encoders and decoders; and H.263 and MPEG4 video format.

The appearance of a multimedia message may vary depending on the receiving device.

Copyright protections may prevent some images, ringing tones, video clips and other content from being copied, modified, transferred, or forwarded.

Write and send

1. At the standby mode, select *Menu > Messages > Multimedia msgs. > Create message.*
2. Enter the text of your message, and select *Options > Insert > Video clip, Image, Sound clip, or Slide.*
3. Choose the object, and press *Insert.*
4. Select *Options > Send to number, Send to e-mail or Send to many.*
5. Enter the number of the recipient or the e-mail address, and press *Select.*

Options

When you create an MMS, depending on the mode of text input you are using, whether you have already attached content, and whether your phone supports the feature, some or all of the following options are available:

Send to number—Send the MMS to a single recipient's phone number.

Send to e-mail—Send the MMS to a single recipient's e-mail address.

Send to many—Send the MMS to more than one phone number or e-mail address.

Insert—Insert an *Image*, *Sound clip*, *Video clip*, or *Slide* into the MMS.

Delete—Delete a *Video clip*, *Image*, *Sound clip*, or *Slide* that has been inserted into the MMS.

Clear text—Erase the text from the message editor.

Preview—View the MMS before sending it.

Previous slide—Go back to the previous slide.

Next slide—Jump to the next slide.

Slide list—View a list of all slides for the MMS.

Slide timing—Defines the display time of a slide.

Place text first/Place text last—Choose where the text appears in relation to the attached content in a slide.

Save message—Select *Saved items* to save the message into your saved items folder.

More options—Choose *Insert contact*, *Insert number*, *Message details*, or *Edit subject*.

Exit editor—Saves the message to your *Saved items* folder automatically, and leave the message editor.

Insert smiley—Insert the smiley face of your choice into your message.

Insert word—Enter the text of a new word that might not appear in the dictionary.

Edit word—Edit the text of a new word that might not appear in the dictionary.



Insert symbol—Insert a special character into your message.

Matches—View matches found in the dictionary for the word you are trying to use.

Dictionary on/Dictionary off—Turn the dictionary on or off.


Writing language—Choose the language of the text editor.

Read and reply

When a multimedia message is being received,  appears. Once the message has been fully downloaded,  and *Multimedia message received* appear.

1. To view the message, press *Show*.
2. To view the message later, press *Exit* > *No* when asked to discard.
3. While viewing the message, select *Options* > *Reply*.
4. Compose your reply using the keypad.
5. Select *Options* > *Send*.



Note: If  blinks and *Multimedia message memory full, view waiting message?* appears, delete some of your old multimedia messages. See [Delete text or multimedia messages, 24](#) for more information.

Options

When you open an MMS that is in SMIL presentation format and if supported by your phone, some or all of the following options are available:

Play presentation—Play the entire presentation, including any image, sound clip, video clip, business card, or calendar note that is attached.

Continue present.—Appears if you have stopped a slide presentation without playing it all the way through. The presentation will begin with the slide in focus.

View text—View the text attached to the MMS.

Open image—View the image, if one is included.

Open sound clip—Select an option associated with the sound clip, if one is included.

Open video clip—Select an option associated with the video clip, if one is included.

Open bus. card—Open the business card, if one is included.

Open calend. note—Open the calendar note, if one is included.

When you open an MMS that contains objects (pictures, tones, or text) that are not part of an SMIL presentation and if supported by your phone, the following options are available:

Zoom—Enlarge the picture.

Contrast—Adjust the contrast of the image.

Save image—Save a picture, if included, to the *Gallery* menu.

Play—Listen to a sound clip or play a video, if one is included.

Save tone—Save a ringing tone, if included, to the *Gallery* menu.

Save video clip—Save a video clip, if included, to the *Gallery* menu.

Details—View the file name, size, date created, and other details of the object in focus.

Open calend. note—Open the attached calendar note, if one is included.

Open bus. card—Open the attached business card, if one is included.

The following options are available when you open any MMS, if supported by your phone or wireless service provider.

Delete message—Delete a saved message.

Reply/Reply to all—Reply to the message. Press *Options* > *Send*. The

sender's phone number or e-mail is used as the default.

Use detail—Extracts any phone numbers, e-mail addresses or URLs found in an MMS and, depending on the content, allows you to open, save, or use.

Edit—Edit the message. You can only edit messages that you have written.

Forward to no.—Forward the message to another number.

Forward to e-mail—Forward the message to an e-mail address.

Forward to many—Forward the message to several recipients.

Message details—View the message subject, size, and class.

Settings

You will need to define the MMS settings. MMS settings include saving your messages to the *Sent items* folder, receiving delivery reports, and more.

1. At the standby mode, select *Menu > Messages > Multimedia msgs. > Message settings.*

2. Scroll to an option, and press *Select* to activate the option or enter its submenu:

Save sent messages—Select *Yes* or *No* to save sent multimedia messages to the *Sent items* folder.

Delivery reports—Select *On* or *Off* to be notified by the network if the message was sent successfully.

Scale image down—Select *Yes* or *No* to scale the image size smaller.

Default slide timing—Default time is 12 seconds. You can personalise the time to your preference.

Allow multimedia reception—Select *Yes*, *No*, or *In home network* for your multimedia service. *In home network* means that you will not receive any multimedia messages that are received outside the home network until you return to the home network.

Incoming multi-media messages—Select *Retrieve* to automatically download multimedia messages or *Ask first* to receive a prompt each time a multimedia message is waiting to be downloaded. *Ask first* allows you to retrieve or reject each MMS on an individual basis.

Multimedia message folders

You can save created messages to the *Saved items* folder.

1. Open the received message or create a new message and press *Options.*

2. Select *Save message > Saved items*.


Sent or received messages are automatically saved to one of the following folders:


Inbox—Multimedia messages are automatically stored here after they are received or if you press *Back* when *Multimedia message received* appears on the standby mode. Multimedia messages that have been read are also stored in the inbox.

Outbox—Multimedia messages that you have created and sent are temporarily stored here until they are sent by the network.

Sent items—Multimedia messages that have been sent by the network are automatically stored here.

■ Delete text or multimedia messages

If your text message memory is full and you have more messages waiting at the network,  blinks on the start screen.

If your multimedia message memory is full,  blinks on the start screen and *Multimedia message memory full, view waiting message?* appears.

You can do the following:

- Read some of the unread messages, and delete them.
- Delete messages from some of your folders.

A single message

To delete a single message, you need to open it first.

1. At the start screen, select *Menu > Messages > Text messages* or *Multimedia msgs.*
2. Scroll to the folder containing the message you wish to delete, and press *Select*.
3. Scroll to the message you wish to delete, and press *Select*.
4. Select *Options > Delete message*.
5. Press *OK* to delete the message or *Back* to exit.

All SMS messages in a folder

1. At the start screen, select *Menu > Messages > Text messages > Delete messages*.
2. Scroll to the folder containing the messages you wish to delete, and press *Select*:
 - All*—Deletes all messages in the folder you choose.
 - All read*—Deletes all read messages in the folder you choose.
 - All unread*—Deletes all unread messages in the *Inbox*.
3. Press *OK* to empty the folder.

All MMS messages in a folder

1. At the start screen, select *Menu* > *Messages* > *Multimedia messages* > *Delete messages*.
2. Scroll to the folder containing the messages you wish to delete, and press *Select*:
 - Inbox*—Deletes all messages in Inbox folder.
 - Outbox*—Deletes all messages in Outbox folder.
 - Sent items*—Deletes all messages in Sent items folder.
 - Saved items*—Deletes all messages in Saved items folder.
3. Press *OK* to empty the folder.

Voice messages

If you subscribe to voice mail, your wireless provider will furnish you with a voice mailbox number. You need to save this number to your phone to use voice mail. When you receive a voice message, your phone lets you know by beeping, displaying a message, or both. If you receive more than one message, your phone shows the number of messages received.

Save voice mailbox number

Your wireless provider may have already saved your voice mailbox number to your phone. If so, the

number will appear in the display in step 2. Press *OK* to leave the number unchanged.

1. At the standby mode, select *Menu* > *Messages* > *Voice messages* > *Voice mailbox number*.

After a brief pause, the *Voice mailbox number* screen appears in the display.

2. If the box is empty, enter the voice mailbox area code and number.
3. Press *OK*.

Call and setup your voice mail

1. Once you have saved the voice mailbox number, press and hold the 1 key.
2. When you connect to voice mail and the prerecorded greeting begins, follow the service's automated instructions to setup your voice mail.

Listen to your voice messages

Once you have setup voice mail, you can dial the voice mailbox number in one of four ways:

- Dial the voice mailbox number using the keypad.
- Press and hold the 1 key.

- Press *Listen* if there is a notification message in the display.
- At the standby mode, select *Menu > Messages > Voice messages > Listen to voice messages*.

Once you connect and the prerecorded greeting begins, follow the automated instructions to listen to your voice messages.

Clear voicemail icon

To clear the new voicemail icon from the standby mode, select *Menu > Messages > Voice messages > Clear voice mail icon*.

Automate voice mail

You can insert special characters called dialling codes into phone numbers such as voice mail, and save the number to a speed dialling location. Dialling codes instruct the receiving system to pause, wait, bypass, or accept the numbers that follow them in the dialling string.



Note: Voice mail services vary by service provider. The following instructions are examples of common operations. Please check with your service provider for specific instructions for using your voice mail service.

Write down voice mailbox number and process

1. Write down your voice mailbox number.
2. Call and check your voice mail as you normally would.
3. Write down your interaction with the recorded prompts step-by-step. Keep in mind that each voice mail service may vary. However, it should look something like this:

Dial 2145551212, pause 5 seconds, press 1, pause 2 seconds, press 1234, press # key.

Be precise; you will need this information in [Setup voice mail with dialling codes, 27](#).

Insert dialling codes

Press the * key repeatedly to cycle through dialling codes. Once the desired code appears in the display, pause briefly and the code is inserted into the dialling string.

The following dialling codes are available:

- *—Bypasses a set of instructions.
- +—International dialling access.
- p—Pauses for 2.5 seconds before sending any numbers that follow.
- w—Waits for you to press the Talk key before sending the numbers or codes that follow.

Setup voice mail with dialling codes

1. At the standby mode, select *Contacts > Speed dialling*.
2. Scroll to an empty speed dialling slot and press *Assign*.
3. Enter your voice mailbox number, including the area code.
4. Refer to dialling codes and enter any codes as necessary using the information that you wrote down from [Write down voice mailbox number and process, 26](#).
For example, if you pause for 5 seconds after connecting to voice mail, enter **p** twice after the voice mailbox number, for example, **2145551212pp**.
5. Enter any remaining pauses or other information that allows you to listen to your messages, and press *OK*.
6. Enter a name (such as Voice Mail), and press *OK*.

To dial and listen to your voice mail, press and hold the assigned speed dialling key at the standby mode.

Minibrowser messages

Minibrowser messaging is a network service. See [Network services, ix](#) for more information.

If your wireless service provider supports this feature, you can check for e-mail messages using the minibrowser. At the standby mode, select *Menu > Messages > Minibrowser messages*, and press *Connect*.

See [Minibrowser, 68](#) for more information on using the minibrowser in your phone to access web pages.

5. Call register



Call register stores information about the last 20 missed, 20 received, or 20 dialled calls. It also adds the total duration of all calls. When the number of calls exceeds the maximum allowance, the most recent call replaces the oldest.

Whether viewing missed, received, or dialled calls, the menu options are the same:

Time of call—Display the date and time of the call.

Send message—Send a message to the number.

View number—Display the number.

Use number—Edit the number and associate a name with the number.

Save—Enter a name for the number and save it to your contacts list.

Add to contact—Add the number to an existing entry in your contacts list, if the number is not associated with a name.

Delete—Clear the number from memory.

Call—Call the number.

■ View missed calls

Missed calls are calls that were never answered.



Note: The missed calls feature does not function when your phone is switched off.

1. If *1 missed call* appears in the display, press *List*.
2. When the phone number appears in the display, press *Options*.
3. Scroll to an option, and press *Select* to activate the option.

OR

1. At the standby mode, select *Menu > Call register > Missed calls*.
2. Scroll to a name or number, and press *Options*.
3. Scroll to an option, and press *Select* to view or activate the option.

■ View received calls

Received calls are calls that have been answered.

1. At the standby mode, select *Menu > Call register > Received calls*.
2. Scroll to a name or number, and press *Options*.

3. Scroll to an option, and press *Select* to view or activate the option.

■ Dialed numbers

Dialed calls are previous numbers you have dialed from your phone:

1. At the standby mode, press the Talk key.

OR

At the standby mode, select *Menu > Call register > Dialed numbers*.

2. Scroll to a name or number, and press *Options*.
3. Scroll to an option, and press *Select* to view or activate the option.

Time of call

You can make or receive up to five calls to or from the same number and view the time each call occurred. Your phone clock must be set for this feature to work accurately.

1. While viewing a missed, received, or dialed number, select *Options > Time of call*.
2. Press the **Scroll down** key to view the most recent time of calls from this number; press *Back* to return to the options list.

■ Delete call registers

You can delete any missed, received, or dialed calls from phone memory.

1. At the standby mode, select *Menu > Call register > Delete recent call lists*.
2. Select the call type you would like to clear (*All, Missed, Received* or *Dialed*).

■ Duration of calls



Note: The actual time invoiced for calls and services by your service provider may vary, depending on network features, rounding off for billing, taxes, and so forth.

Last call

At the standby mode, select *Menu > Call register > Call duration > Duration of last call > Details* for more information.

Dialed calls

At the standby mode, select *Menu > Call register > Call duration > Duration of dialed calls > Details* for more information.

Received calls

At the standby mode, select *Menu > Call register > Call duration > Duration of received calls > Details* for more information.

All calls

At the standby mode, select *Menu > Call register > Call duration > Duration of all calls.*

Life timer

At the standby mode, select *Menu > Call register > Call duration > Life timer.*



Note: Some timers, including the life timer, may be reset during service or software upgrades.

Clear all timers

1. At the standby mode, select *Menu > Call register > Call duration > Clear timers > OK*
2. Enter your lock code, and press *OK.* (See [Change lock code, 58](#) for more information.)

■ Duration of data/fax calls

Data/fax calls are a network service. See [Network services, ix](#) for more information. If your wireless service provider supports this feature, you can view the size or duration of sent or received data and fax calls.



Note: The actual time invoiced for calls and services by your service provider may vary, depending on network features, rounding off for billing, taxes, and so forth.

1. At the standby mode, select *Menu > Call register > Data/fax calls.*
2. Scroll to one of the following options:

Last sent data/fax—View the size (KB) of the last sent data/fax call.

Last received data/fax—View the size (KB) of the last received data/fax call.

All sent data/fax—View the size (KB) of all sent data and fax calls.

All received data/fax—View the size (KB) of all received data and fax calls.

Duration of last data/fax call—View the duration time of the last data or fax call.

Duration of all data/fax calls—View the duration time of all calls.

Clear all data/fax registers—Press *OK > Yes* to clear all data/fax registers.

■ Duration of minibrowser calls

Minibrowser is a network service. See [Network services, ix](#) for more information. If your wireless service provider supports this feature, you can view the size or duration of sent or received data from the minibrowser.



Note: The actual time invoiced for calls and services by your service provider may vary, depending on network features, rounding off for billing, taxes, and so forth.

1. At the standby mode, select *Menu > Call register > Minibrowser calls*.
2. Scroll to one of the following options:
 - Last sent browser data*—View the size (KB) of the last sent browser data.
 - Last received browser data*—View the size (KB) of the last received data.
 - All sent browser data*—View the size (KB) of all sent browser data.
 - All received browser data*—View the size (KB) of all received browser data.
 - Last browser session*—View the duration time of the last browser session.
 - All browser sessions*—View the duration time of all browser sessions.
 - Clear all browser registers*—Press *OK > Yes* to clear all browser registers.

6. Contacts



The contacts list can hold up to 500 contacts, with multiple numbers and text notes for each contact. The amount of numbers and text entries that you can save may vary, depending on length and the total number of entries in the contacts list.

Highlight *Contacts* in the main menu and press *Select* to access all options in the menu. To quickly find names saved in the *Contacts* list, you can use the **Scroll up** or **Scroll down** keys. For more information on configuring the **Right selection** key to your preference, see [Personal shortcuts, 48](#).

■ Add new contacts

Save a name and number

1. At the standby mode, enter the phone number you wish to save.
2. Select *Options* > *Save*.
3. Enter the name, and press *OK*.

Save (only) a number

1. At the standby mode, enter the phone number you wish to save.
2. Press and hold *Options*.

Save an entry

1. At the standby mode, select *Contacts* > *Add new*.
2. Enter the name, and press *OK*.
3. Enter the phone number, and press *OK* > *Done*.

Save multiple numbers and text items

You can save different types of phone numbers, addresses, and notes to entries in the contacts list. The first number you save for any entry is automatically set as the default but the default number can always be changed.

1. At the standby mode, press the **Scroll down** key to highlight the entry to which you wish to add a phone number or text item.
2. Select *Details* > *Options* > *Add number* or *Add detail*.

If you selected *Add number*, select *General*, *Mobile*, *Home*, *Office*, or *Fax*.

If you selected *Add detail*, select *E-mail address*, *Web address*, *Postal address*, or *Note*.

3. Enter the number or text for the type you have selected, and press *OK*.

4. To change a number type (*General, Mobile, Home, Office, or Fax*), select *Change type* in the options list.

You can also change which phone number is the default number for the contact entry.

1. At the standby mode, press the **Scroll down** key to select the number you wish to change, and press *Details*.
2. Scroll to the number you wish to set as default, and select *Options > Set as default*.

Set up voice tags

For information on setting up voice tags and other voice features, see [Voice, 62](#).

Caller groups

You can add contacts list entries to any of five caller groups, and then assign a unique ringing tone or graphic to that group. This enables you to identify callers from the group by their unique ringing tone or graphic.

Setup a group

1. At the standby mode, press the **Scroll down** key to display the list of entries in your contacts list.
2. Scroll to a name you would like to add to a caller group, and press *Details*.

3. Select *Options > Caller groups*.
4. Select the caller group to which you would like to add the name.

Options

1. At the standby mode, select *Contacts > Caller groups*. *Family, VIP, Friends, Business, and Other* are the available caller groups.
2. Use the **Four-way scroll** key to highlight a group and press *Select* to display the following caller group options:
 - Group name*—Rename the group to your preference.
 - Group ringing tone*—Set the ringing tone for the group.
 - Group logo*—Turn the graphic for the caller group on or off.
 - Group members*—Add or remove members from the caller group.

Set up speed dialling

You can associate any entry in the contacts list with a key from **2–9**; then dial those entries by pressing and holding the assigned key.

Assign a key to speed dialling

1. At the standby mode, select *Contacts > Speed dialling*.
2. Scroll to any (empty) slot, and press *Assign*.
3. Enter the number (including the area code), and press *OK*; or press

Search to retrieve a number from the contacts list.

4. Enter a name for the number, and press *OK*.

If speed dialling is off, the phone displays a prompt asking if you would like to turn speed dialling on.

5. Press *Yes* to activate speed dialling.

Change speed dialling numbers

1. At the standby mode, select *Contacts > Speed dialling*.
2. Scroll to the speed dialling entry you wish to change, and select *Options > Change*.
3. Enter the new number; or press *Search* to retrieve a number from the contacts list, and press *OK*.
4. Enter a name for the entry, and press *OK*.

Delete speed dialling numbers

1. At the standby mode, select *Contacts > Speed dialling*.
2. Scroll to the speed dialling location you wish to delete, and press *Options > Delete*.
3. Press *OK* to delete the key assignment.

Edit contacts list entries

1. At the standby mode, press the **Scroll down** key to scroll to the contact entry you would like to edit, and press *Details*.
2. Scroll to the phone number you wish to edit, and press *Options*.

Depending upon the contact entry you are editing, you may select from the following options:

Add voice tag—Add a voice tag to the contact.

Edit number—Edit an existing phone number of the contact.

Delete number—Delete a phone number from the contact.

Use number—Displays the phone number on the standby mode, ready to be called.

View—View the details of the contact entry.

Change type—Change the number type to *General*, *Mobile*, *Home*, *Office*, or *Fax* or the detail type to *E-mail address*, *Web address*, *Postal address*, or *Note*.

Set as default—Change the default number of the contact.

Add number—Add a number to the contact.

Add detail—Add an address or note to the contact.

Add image—Add an image from the gallery to the contact.

Caller groups—Add the contact to an existing caller group.

Custom tone—Add a custom ring tone to the contact.

Send bus. card—Send the contact via text message to another phone.

Send message—Create and send the contact a message.

Speed dial—Add the contact to your speed dialling list.

Edit name—Edit the name of the contact.

View name—View the name of the contact.

Delete—Delete the entire contact entry from your contacts list.

Send SMS e-mail—Send a SMS to an e-mail address directly from a contact entry.

Edit detail—Allows you to edit e-mail address, web address, postal address, or note.

Delete detail—Deletes e-mail address, web address, postal address, or note.

Open—Launches the Minibrowser to the highlighted web address.

3. Edit the option to your preference, and press **OK**.

■ Delete contacts list entries

1. At the standby mode, select **Contacts > Delete**.
2. To delete individual entries, select **One by one**.
3. Scroll to the entry you wish to delete, press **Delete > OK** to confirm.
4. To delete the entire contents of your contacts list, select **Delete all**.
5. Press **OK** to confirm.
6. Enter the lock code and press **OK**. (See **Change lock code, 58** for more information.)

■ View Contacts

1. At the standby mode, select **Contacts**. The following menu items appear:
 - Search**—Find a name or select from a list.
 - Add new**—Add a contact to your contacts list.
 - Edit name**—Edit an existing name.
 - Delete**—Delete a name and its associated numbers.
 - Add number**—Add a number to an existing name.
 - Settings**—Change the contacts list view or check the memory status of your phone.

Speed dialling—View or modify the list of speed dialling numbers.

Voice tags—Attach, listen to, or modify a voice tag to a contact in the contacts list.

My number—View your own phone number.

Caller groups—View and edit the properties for any of the caller groups, including *Family*, *VIP*, *Friends*, *Business*, or *Other*.

2. Scroll to an item, and press *Select* to activate the feature or enter its submenu.

Search for a name

1. At the standby mode, press the **Scroll down** key to display the contents of your contacts list.
2. Press the key which corresponds to the first letter of the name for which you are performing a search. Press the key as many times as necessary until the desired letter appears.
3. Use the **Scroll up** and **Scroll down** keys to select a contact, and press *Details* to view the details.

Configure settings

You can select how the contacts appear in your contacts list and view the amount of memory used or available in your phone.

1. At the standby mode, select *Contacts* > *Settings*.
2. Select one of the following options:

Scrolling view—Select *Name list*, *Name and number*, or *Name and image* view.

Memory status—View the amount of phone memory used as well as the amount of phone memory available



Note: For more information on used and available memory, see [Shared memory](#), ix.

■ Send and receive contacts (business cards)

If supported by your wireless provider, you can send and receive a business card as a text message to a compatible phone or other handheld device.

Send a business card

1. Highlight the entry from the contacts list that you wish to send and select *Details > Options > Send bus. card > Via text message*.
2. Select *Default number* or *All details* (if more than one number or detail exists for the contact entry).
3. Enter the number for your recipient, or press *Search* to retrieve a number from your contacts list.
4. Press *OK* and the business card is sent.

7. Organiser




Your phone contains features to help organise your everyday life, including an alarm clock, calendar, To-do list, calculator, countdown timer, stopwatch, and calorie counter.

■ Alarm clock

Set an alarm


The alarm clock is based on the phone clock. It sounds an alert any time you specify and even works if the phone is turned off. If you have not set the time on your phone clock, you will be prompted to do so before setting an alarm.

1. At the standby mode, select *Menu > Organiser > Alarm clock > Alarm time*.
2. Enter the time for the alarm in hh:mm format, and press *OK*.
3. Select *am* or *pm* (if using *12-hour* format).
Alarm on appears briefly in the display and  appears on the standby mode.

Change the time

1. At the standby mode, select *Menu > Organiser > Alarm clock > Alarm time > On*.

2. Enter the time for the alarm in hh:mm format, and press *OK*.
3. Select *am* or *pm* (if using *12-hour* format).

Alarm on appears briefly in the display and  appears on the standby mode.

Set the alarm tone

You can set which tone is played when the alarm sounds.

1. At the standby mode, select *Menu > Organiser > Alarm clock > Alarm tone*.
2. Highlight *Standard*, *Ringing tone*, or *Open Gallery* to choose the tone of your choice and press *Select*.

Repeat an alarm

You can set the alarm to repeat every day or only on certain days of the week.

1. At the standby mode, select *Menu > Organiser > Alarm clock > Repeat alarm*.
2. Highlight the day (or days) of the week you wish to repeat the alarm and press *Mark*. (Use *Unmark* to remove a day.)

3. Select *Done* when you have added all desired days.

Alarm conditions

When the alarm sounds, your phone beeps and the display lights up.

With the phone on, press *Stop* to shut the alarm off, or press *Snooze*. The alarm stops for 10 minutes and *Snooze on* appears in the display. Press *Stop* at any time to turn the snooze off.



Note: The alarm sounds for one minute. If you do not press a key, the alarm stops (snoozes) for 10 minutes, then sounds again.

If the alarm time is reached while the phone is switched off, the phone switches itself on and starts sounding the alarm tone. If you press *Stop*, the device asks whether you want to activate the phone for calls. Press *No* to switch off the device or *Yes* to make and receive calls. Do not press *Yes* when wireless phone use may cause interference or danger.

Turn an alarm off

At the standby mode, select *Menu* > *Organiser* > *Alarm clock* > *Alarm time* > *Off*.

Calendar

The calendar keeps track of reminders, memos, calls you need to

make, meetings, and birthdays. You can even set an alarm for any of these events.

Monthly view provides an overview of the selected month and weeks. It also allows you to jump to a specific date. Any days or dates that appear in bold font contain calendar notes such as a meeting or reminder.

Open

At the standby mode, select *Menu* > *Organiser* > *Calendar*.



Note: To open the calendar quickly, press the *Scroll right* key at the standby mode.

You can move the cursor in some calendar views by using the *Four-way scroll* keys.

Go to a date

1. At the standby mode, select *Menu* > *Organiser* > *Calendar* > *Options* > *Go to date*.
2. Enter the date (for example, 04/30/2004), and press *OK*.

Note a specific date

You can choose from five types of notes: *Meeting*, *Call*, *Birthday*, *Memo*, and *Reminder*. Your phone asks for further information depending on which note you choose. You also have the option to set an alarm for any note that you select.

1. Go to the date for which you want to set a reminder. (See [Go to a date, 39](#) if you need more information.)
2. From the monthly view (with the date highlighted), select *Options > Make a note*.
3. Select one of the following note types, and select *Options > Save*:

Meeting—You are prompted to enter a subject, location, and a start/end time. You are then given the option to set an alarm.

Call—You are prompted to enter a phone number, a name, and the time. You are then given the option to set an alarm.

Birth day—You are prompted to enter the person's name, and year of birth. You are then given the option to set an alarm.

Memo—You are prompted to enter a subject, a start date, and an end date. You are then given the option to set an alarm.

Reminder—You are prompted to enter the subject you wish to be reminded about. You are then given the option to set an alarm.

View notes (day view)

After you have created some calendar notes, you can view them as follows:

1. At the standby mode, select *Menu > Organiser > Calendar*.

2. Scroll to the date containing the note.
Any days containing notes will be in bold font.
3. Select *Options > View day*.
4. To view more details of a highlighted note, select *Options > View*.

Options while viewing a list of notes

1. Press *Options* while viewing a day's notes to display the following options:

The options listed below are available either while viewing the body of a note or viewing the header of a note.

View—View the full details of the note.

Make a note—Create a new note for the selected date.

Delete—Delete the note.

Edit—Edit the note.

Move—Move the note to another date on your calendar.

Repeat—Enable the note to recur on a regular basis (daily, weekly, biweekly, monthly, or yearly).

Go to date—Jump to another date on your calendar.

Send note—Send the note to another device using text message or in vCal format.

Copy—Copy the note. You can then paste the note to another date.

Settings—Set the date and time, date and time formats, the day each week starts, and whether you want your notes to auto-delete after a specified time.

Go to To-do list—Takes you to the To-do list for the selected date.

2. Scroll to an option, and press **Select** to activate it or enter its submenu.

Send a note

1. At the standby mode, select **Menu > Organiser > Calendar**.
2. Scroll to the date containing the note you wish to send. (Any days containing notes will be in bold font.)
3. Select **Options > View day**.
4. Scroll to the note you wish to send, and select **Options > Send note > Via calendar** or **Via text message**.
5. If you selected **Via calendar**, enter the recipient's phone number or e-mail address, and press **OK**; or press **Search** to retrieve a number from your contacts list, and press **Select > Send**. The note is sent.
6. If you selected **Via text message**, the note appears in the display as a text message.

7. Select **Options > Send to > Send to number, Send to e-mail, Send to many, or Send to distrib. list**.

Send to distrib. list is available only if there are distribution lists programmed in the phone.

8. Enter the recipient's phone number or e-mail address, and press **OK**; or press **Search** to retrieve a number from your contacts list and press **Select > Send**. The note is sent.

Receive a note

When you receive a calendar note, your phone displays **Calendar note received**. You can then save the note in your Calendar and set an alarm for a date and time.

View notes

1. When your phone displays **Calendar note received**, press **Show**.
2. Scroll to view the entire message, if necessary.

Save notes

After viewing the calendar note, select **Options > Save**.

Discard notes

After viewing the calendar note, select **Options > Discard**.

■ The To-do list

You can keep track of your tasks with the To-do list feature. The number of notes you can save depends on their length and the unused memory of the phone. To-do notes are not related to specific dates.

Add a To-do note

1. At the standby mode, select *Menu > Organiser > To-do list > Options*.
If this is your first time to use the To-do list, *Add* is highlighted.
2. Press *Select*, enter your To-do note, and select *Options > Save > High, Medium, or Low* priority.

Options while viewing To-do notes

Press *Options* while viewing the header or body of a note, and press *Select* to activate an option or enter its submenu.

■ Calculator

The calculator in your phone adds, subtracts, multiplies, divides, calculates the square and the square root, and converts currency values.



Note: This calculator has a limited accuracy and is designed for simple calculations.

1. At the standby mode, select *Menu > Organiser > Calculator*.
2. Enter the first number in the calculation.
Press the # key for a decimal point if necessary.
To perform a square or square root calculation, select *Options > Square or Square root*.
3. Press the * key to cycle through the add (+), subtract (-), multiply (*), and divide (/) characters. Pause briefly to select the displayed character.
4. Enter the second number in your calculation.
5. Press *Options (Equals is highlighted)*, and press *Select*.

Currency converter

You can convert foreign currency to domestic or vice versa.

1. At the standby mode, enter a currency amount to convert.
2. Select *Options > To domestic or To foreign*.

To domestic—converts foreign currency to domestic currency.

To foreign—converts domestic currency to foreign currency.

If you have not done so already, you are prompted to enter the exchange rate.

3. Enter the exchange rate (press the # key to insert a decimal), and press **OK**.

Edit the exchange rate

At any time, you can edit the exchange rate used by the currency converter.



Note: When you change base currency, you must key in the new rates because all previously set exchange rates are set to zero.

1. At the standby mode, select *Menu > Organiser > Calculator > Options > Exchange rate > Foreign units in domestic units* or *Domestic units in foreign units*.

Foreign units in domestic units—the number of domestic units it takes to make one unit of foreign currency

Domestic units in foreign units—the number of foreign units it takes to make one unit of your domestic currency

2. Enter the exchange rate, and press **OK**.

Countdown timer


You can enter a specified time (up to 99 hours, 59 minutes, and 59 seconds). When the time runs out, your phone sounds an alarm.



Note: The countdown timer only works when the phone is on. Once you turn off your phone, the timer is no longer active.

Set the countdown timer

1. At the standby mode, select *Menu > Organiser > Countdown timer*.
2. Enter the time (in hh:mm:ss format), and press **OK**.
3. Enter a note for the timer, and press **OK**.

The  icon appears on the standby mode when the countdown timer is set.

When the time runs out, your phone sounds an alarm, displays the timer note, and flashes its lights.

- Press any key during the alarm to stop the alarm.
- After 30 seconds the timer alert expires automatically.

Change the time

After you have set the timer, you can change the time.

1. At the standby mode, select *Menu > Organiser > Countdown timer > Change time*.
2. Enter the new time, and press **OK**.
3. Leave the note as it was, or enter a new note, and press **OK**.

Stop the timer before the alarm sounds

After you have set the timer, you can stop the timer.

At the standby mode, select *Menu > Organiser > Countdown timer > Stop timer*.

■ Stopwatch

Your phone has a stopwatch that can be used to track time. The stopwatch displays time in hours, minutes, seconds and fractions of a second in hh:mm:ss.s format.

Using the stopwatch or allowing it to run in the background when using other features increases the demand on battery power and reduces the battery life.

Measure time

1. At the standby mode, select *Menu > Organiser > Stopwatch > Split timing > Start*.

The running time is displayed on the screen.

2. Press *Stop* to end the timing.

The total time is displayed on the screen.

Measure split time

You can use the split time function for such things as a long distance race when you need to pace yourself.

1. At the standby mode, select *Menu > Organiser > Stopwatch > Split timing > Start*.

2. Press *Split* to note the lapsed time.

The timer continues to run. The split time appears below the running time. If you split the time more than once, the new measured time appears at the beginning of the list. You can scroll to see previous measured times.

3. Press *Stop* to end the split timing.

Measure lap time

You can use the lap time function when you want to track how long it takes to complete each cycle or lap.

1. At the standby mode, select *Menu > Organiser > Stopwatch > Lap timing > Start*.

2. Press *Lap* to note the lap time.

The clock stops, then starts immediately from zero. The lap time appears below the running time. If you take more than one lap time, the new measured time appears at the beginning of the list. You can scroll to see previous measured times. When you press *Stop*, the total time appears at the top.

Save the time

1. While the clock is running, select *Stop > Options > Save*.
2. Enter a name for the measurement, and press *OK*.
If you do not enter a name, the total time is used as the default title for the time.

Options

You can choose the following options when using the stopwatch for split timing or lap timing:

Continue—Shows up when the stopwatch is working in the background.

Show last time—Allows you to view the last measured time.


Split timing—Track a long distance race when you need to pace yourself.

Lap timing—Track how long it takes to complete each cycle or lap.

View times—Allows you to browse the saved times.

Delete times—Allows you to delete any saved times. You can delete the saved times one by one or all at once.

Operation note

If you press the **End** key and return to the standby mode while the stopwatch is still running, the stopwatch continues to run in the background and the  icon

appears in the upper left corner of the screen.

To return to the stopwatch screen:

1. At the standby mode, select *Menu > Organiser > Stopwatch > Continue*.
2. To stop the clock, press *Stop*.

■ Calorie counter

The calorie counter estimates the amount of energy used in various physical activities. The energy used depends on age, weight, and gender. You can save up to 10 activities in your phone.

The calorie counter provides general measurements for personal use that may vary from scientific measurements.

Save personal data

1. At the standby mode, select *Menu > Organiser > Calorie counter > Settings*.
2. Enter *Weight, Age, Gender*, and if desired, change the *Weight format, Calorie format* and *Velocity format*.
3. Press *OK* or *Select* after each entry to save the data.

Select an activity

1. At the standby mode, select *Menu > Organiser > Calorie counter > Activities*, and press

Add new; or press *Options* > *Add new*.

2. Select an activity.
3. If prompted, select an intensity level.
4. Enter the duration of the activity (in hh:mm format), and press *OK*.
5. Press *OK* to save the activity.

Edit and delete activities

1. To edit activities, press *Options* while in the *Activities* menu.
2. You can now add a new activity, edit an existing one, total the calorie amount of all selected activities, or delete an activity.
3. To delete all activities at once, select *Menu* > *Organiser* > *Calorie counter* > *Delete all* > *OK*.

8. Settings



Use this menu to set or change your profiles, personal shortcuts, call settings, phone settings, time and date settings, display settings, tone settings, enhancement settings, security settings, network, network services, and to restore the factory settings.

■ Profiles

Profiles define how your phone reacts when you receive a call or message, how your keypad sounds when you press a key, and more. You can choose from one of the prenamed profiles, or personalise profiles of your own. The following profiles are available: *General*, *Silent*, *Meeting*, *Outdoor*, *Mystyle 1*, and *Mystyle 2*.

Ringing options, keypad tones, and other settings for each of the available profiles can be left at their default setting, or personalised to suit your needs.

Profiles are also available for enhancements such as a headset and car kit. See [Enhancement settings, 56](#) for more information about enhancement profiles.

Activate

1. At the standby mode, select *Menu > Settings > Profiles*.
2. Scroll to the profile of your choice, and press *Select*.
3. Select *Activate*.

Personalise a profile

You can personalise any of the profiles a variety of ways.

1. At the standby mode, select *Menu > Settings > Profiles*.
2. Scroll to the profile you wish to personalise, and press *Select*.
3. Select *Personalise*.
4. Select the option you want to personalise (*Incoming call alert*, *Ringing tone*, *Ringing volume*, *Vibrating alert*, *Message alert tone*, *Keypad tones*, *Warning tones*, *Rhythmic backlight alert*, *Alert for*, or *Profile name*).



Note: You cannot rename the *General* profile.

Set a timed profile

Timed profiles can be used to prevent missed calls. For example, suppose you attend an event that requires your phone be set to *Silent*

before the event starts, but you forget to return it to *General* until long after the event. A timed profile can prevent missed calls by returning your phone to the default profile at a time you specify.

Timed profiles can be set up to 24 hours in advance.

1. At the standby mode, select *Menu > Settings > Profiles*.
2. Select the profile you wish to activate and set for timed expiration.
3. Select *Timed*.
4. Enter the time for the profile to expire, and press *OK*.

■ Personal shortcuts

The personal shortcuts menu allows you to change the function of the **Right selection** key on your phone so that your most frequently used functions can be quickly accessed from the *Go to* menu on the standby mode.

At the standby mode, select *Menu > Settings > Personal shortcuts > Right selection key > Contacts* or *Go to*.

Choose 'Go to' functions

1. At the standby mode, select *Menu > Settings > Personal shortcuts > Select 'Go to' options*.

2. Use the **Scroll up** key and the **Scroll down** key to highlight the desired functions from the list of available functions.
3. Press *Mark* to add a function. Use *Unmark* to remove a function.
4. Select *Done* when you have added all desired functions.
5. Select *Yes* to save the changes.
6. At the standby mode, press *Menu > Go to* to display a list of the functions that you selected in step 3.

Organise functions

1. At the standby mode, select *Menu > Settings > Personal shortcuts > Organise 'Go to' options*.
2. Use the **Scroll up** key or the **Scroll down** key to highlight the function you wish to rearrange, and select *Move*.
3. Select *Move up*, *Move down*, *Move to top*, or *Move to bottom*.
4. Press *Done > Yes* to save the changes.

■ Call settings

Anykey answer

Anykey answer allows you to answer an incoming call by briefly pressing any key except the **Power** key, **Right selection** key, or **End** key.

At the standby mode, select *Menu > Settings > Call settings > Anykey answer > On or Off.*

Automatic redial

Occasionally, your network may experience heavy traffic, resulting in a fast busy signal when you dial. With automatic redial activated, your phone redials the number (number of redials depends on your wireless service provider), and notifies you once the network is available.

At the standby mode, select *Menu > Settings > Call settings > Automatic redial > On or Off.*

Speed dialling

You can activate or deactivate speed dialling. For more information, see [Set up speed dialling, 33](#).

Automatic update of service

Your phone is capable of receiving updates to wireless services sent to your phone by your service provider.

At the standby mode, select *Menu > Settings > Call settings > Automatic update of service > On or Off.*

Calling card

If you use a calling card for long distance calls, you can save the calling card numbers in your phone.

Your phone can store up to four calling cards.

Save information

- At the standby mode, select *Menu > Settings > Call settings > Calling card.*
- Enter your lock code, and press *OK.* (See [Change lock code, 58](#) for more information.)
- Scroll to one of the four memory locations, and select *Options > Edit > OK > Dialling sequence.*
- Select one of the following sequence types:
 - Access no.+ phone no.+ card no.—* Dial access number, phone number, then card number (+ PIN if required)
 - Access no.+ card no.+ phone no.—* Dial access number, card number (+ PIN if required), then phone number
 - Prefix+ phone no.+ card no.—* Dial the prefix (numbers that must precede the phone number) and phone number you want to dial, then card number (+ PIN if required)
- Enter the required information (access number or prefix and card number), and press *OK* to confirm your entries.
- Select *Card name.*
- Enter the card name, and press *OK.*



Note: Contact your calling card company for more information.

Make calls

After you have saved your calling card information in your phone, you can make a call using your calling card.

1. At the standby mode, select *Menu > Settings > Call settings > Calling card*.
2. Enter your lock code, and press *OK*. (See [Change lock code, 58](#) for more information.)
3. Scroll to the calling card of your choice, select *Options > Select > OK*.
4. Press the **End** key to return to the standby mode; then enter the phone number, including any prefix (such as 0 or 1) that your calling card may require when you make a calling card call.
See your calling card for instructions.
5. Press and hold the **Talk** key for a few seconds until *Card call* is displayed.
6. When you hear the tone or system message, press *OK*.

International prefix

You can store an international dialling prefix into your phone.

When you enter "+" at the beginning of a phone number, your phone automatically inserts the international dialling prefix that you have stored.

Note: Entering the international dialling prefix with the "+" is a network service. Check with your service provider for availability.

1. At the start screen, select *Menu > Settings > Call settings > International prefix*.
2. Enter the international dialling prefix (for example, 001) and press *OK*.
3. At the start screen, press the */+ key twice to use "+" to enter the phone number you wish to call. (For example, +3546789.)

The phone dials the international dialling prefix you have stored in your phone and the phone number you have entered. (For example, the phone dials 001354789.)

Data/fax calls

Data or fax calls is a network service. See [Network services, ix](#) for more information.

If your wireless service provider supports this feature, you can set up the phone to send or receive data or fax calls when a terminal, such as a PDA or PC, is connected.

For better performance during data calls, place the phone on a stationary surface with the keypad facing downward. Do not move the phone by holding it in your hand during a data call.



Note: For more information on connectivity, refer to the PC/PDA Connectivity Guide. The PC/PDA Connectivity Guide can be downloaded from the Nokia website at <http://www.nokia-asia.com/>.

- At the standby mode, select *Menu > Settings > Call settings > Data/fax calls > Incoming data/fax call > Normal, Data calls only, or Fax calls only*.
Normal—The phone receives incoming calls as usual.
Data calls only—The phone receives only data calls.
Fax calls only—The phone receives only fax calls.
- When you are finished receiving the fax or data call, repeat step 1 and select *Normal*.

Data transfer

You can view the transmission speed when sending or receiving data or fax calls.

At the standby mode, select *Menu > Settings > Call settings > Data/fax calls > Data rate display > Graphic* or *Off*.

Call summary

You can view the time spent on a call when you hang up.

At the standby mode, select *Menu > Settings > Call settings > Call summary > On* or *Off*.

Phone settings

Set the language

- At the standby mode, select *Menu > Settings > Phone settings > Language settings > Phone language* or *Writing language*.
Phone language—Changes the display language on your phone.
Writing language—Changes the language of the text editor.
- Scroll to the language of your choice and press *Select*.

The *Phone language* setting affects the time and date formats of the clock, alarm clock, and calendar.

Use automatic keyguard

You can set the keypad of your phone to lock automatically after a preset time delay (from 10 seconds to 60 minutes).

- At the standby mode, select *Menu > Settings > Phone settings > Automatic keyguard > On* or *Off*.

- If you selected *On*, *Set delay:* appears in the display.
- Enter the delay (in mm:ss format), and press *OK*.



Important: When keyguard is on, it may be possible to dial the emergency number programmed into your phone. Key in the emergency number and press the **Talk** key. The number is displayed only after you have keyed in its last digit.

Set DTMF tones

DTMF tones are the tones that sound when you press the keys on your phone keypad. You can use DTMF tones for many automated dial-up services such as banking and airlines, or for entering your voice mailbox number and password.

DTMF tones are sent during an active call. You can send them manually from your phone's keypad, or send them automatically by saving them in your phone.

Set type

- At the standby mode, select *Menu > Settings > Phone settings > DTMF tones > Manual DTMF tones*.
- Select one of the following options:

Continuous—The tone sounds for as long as you press and hold a key.

Fixed—Used to send tones of the duration you specify in the *DTMF tone length* option.

Off—Used to turn off tones. No tones are sent when you press a key.

Set fixed length

You can also specify DTMF tone length when using the *Fixed* option.

At the standby mode, select *Menu > Settings > Phone settings > DTMF tones > DTMF tone length > Short* (0.1 seconds) or *Long* (0.5 seconds).

Start-up tone

You can set your phone to play (or not to play) a start-up tone when the phone is powered on.

At the standby mode, select *Menu > Settings > Phone settings > Start-up tone > On* or *Off*.

Create a welcome note

You can write a welcome note which briefly appears on the display screen whenever you switch your phone on.



Note: Dictionary mode is not available for entering welcome note text.

1. At the standby mode, select *Menu > Settings > Phone settings > Welcome note*.
2. Enter a note (up to 44 characters).
Press the * key to display and select from available special characters.
3. When you are finished, select *Options > Save*.
4. Scroll to *Delete*, and press *Select* if you want to delete the previous text and begin creating another welcome note.

Choose a banner

Banner is a network service. See [Network services](#), ix for more information.

If your wireless service provider supports this feature, you can choose whether the display shows the operator logo when the phone is in the idle state.

At the standby mode, select *Menu > Settings > Phone settings > Banner > Default* or *Personalise*.

Activate Help text

Your phone displays brief descriptions for most menu items. When you arrive at a feature or menu, pause for about 10 seconds and wait for the help text to display. Use the scroll keys to page through the full help text, if necessary.

The default setting for Help text is on. However, you can turn help text on or off by doing the following from the standby mode.

At the standby mode, select *Menu > Settings > Phone settings > Help text activation > On* or *Off*.

Time and date settings

Time

Show/hide the clock

At the standby mode, select *Menu > Settings > Time and date settings > Clock > Show clock* or *Hide clock*.

Set the time

1. At the standby mode, select *Menu > Settings > Time and date settings > Clock > Set the time*.
2. Enter the time (in hh:mm format), and press *OK*.
3. Select *am* or *pm*.

Change the format

At the standby mode, select *Menu > Settings > Time and date settings > Clock > Time format > 24-hour* or *12-hour*.

Date

Show/hide the date

At the standby mode, select *Menu > Settings > Time and date settings > Date > Show date* or *Hide date*.

Set the date

1. At the standby mode, select *Menu > Settings > Time and date settings > Date > Set the date.*
2. Enter the date, and press *OK.*

Change the date format

1. At the standby mode, select *Menu > Settings > Time and date settings > Date.*
2. Select *Date separator.*
3. Scroll to the separator of your choice, and press *Select.*
4. Select *Date format.*
5. Scroll to the format of your choice, and press *Select.*

Set the auto-update of date & time

Auto-update is a network service. See [Network services](#), ix for more information.

If your wireless service provider supports this feature, you can allow the digital network to set the clock, which is useful when you are out of your home area, for instance when you have traveled to another network or time zone.

At the standby mode, select *Menu > Settings > Time and date settings > Auto-update of date & time > On, Confirm first, or Off.*

If you use the *Auto-update of date & time* option while outside your digital network, you may be

prompted to enter the time manually. Network time will replace the time and date when you re-enter your digital network.

If your battery has been removed or has drained outside the digital network, you may be prompted to enter the time manually (once the battery is replaced/recharged, and you are still outside of the digital network).

■ Display settings

Choose a wallpaper

You can set your phone to display a background picture (wallpaper) on the standby mode.

1. At the standby mode, select *Menu > Settings > Display settings > Wallpaper > Select wallpaper.*
2. Browse the folders in the gallery, highlight a folder, and press *Open.*
3. Browse the folder.
4. When you arrive at the image of your choice, select *Options > Set as wallpaper.*
5. If *Replace current wallpaper?* appears in the display, press *OK.*

To activate/deactivate wallpaper, at the standby mode, select *Menu > Settings > Display settings > Wallpaper > On or Off.*

Choose a colour scheme

You can change the colour of some display components in your phone, such as indicators and signal bars.

1. At the standby mode, select *Menu > Settings > Display settings > colour schemes*.
2. Scroll to the colour scheme of your choice, and press *Select*.

Screen saver

If you have turned the screen saver on, then the screen saver is activated when no function of the phone is used after a preset period of time. Press any key to deactivate the screen saver.

At the standby mode, select *Menu > Settings > Display settings > Screen saver*. Scroll to the option of your choice, and press *Select*:

On—Activate the screen saver.

Off—Deactivate the screen saver.

Select s. saver—Choose a screen saver from the *Graphics* folder in the *Gallery* menu.

Time-out—Set your phone to display a screen saver after a preset time or after a custom time (up to 60 minutes) of your choosing.

Choose a menu view

You can choose whether the menu items in your phone appear as a list or as a 3x3 grid. (*Grid* is the default

selection in your phone.) For more information, see [User interface features, 3](#).

At the standby mode, select *Menu > Settings > Display settings > Menu view > List* or *Grid*.

Set the display brightness

You can change the brightness of your phone display.

1. At the standby mode, select *Menu > Settings > Display settings > Display brightness*.
2. Use the **Scroll left** and **Scroll right** keys to adjust the contrast level to your preference.
3. Press *OK* to accept your settings.

Backlight time-out

The light on the standby mode (backlight) times out after 15 seconds of no activity. However, you can personalise the backlight to time out at a different time.

At the standby mode, select *Menu > Settings > Display settings > Backlight time-out > 15 seconds*, or *Personalise*.

■ Tone settings

From this menu, you can adjust the ringing volume, keypad tones, and other tone settings for the currently active profile. See [Personalise a profile, 47](#) for more information on profile settings.

■ Enhancement settings

The *Enhancement settings* menu is shown only if the phone is or has been connected to a compatible enhancement.

At the standby mode, select *Menu* > *Settings* > *Enhancement settings* > *Headset*, *Handsfree*, *Loopset*, *Text phone* or *Charger*.

Note: This phone does not support *Text phone*.

Headset

Scroll to the option of your choice, and press *Select* to enter the submenu and modify its settings.

Default profile—Choose the profile you wish to be automatically activated when a headset is connected

Automatic answer—Calls are answered automatically after one ring when a headset is connected. Select *On* or *Off*.

Handsfree

Scroll to the option of your choice and press *Select* to enter the submenu and modify its settings.

Default profile—Choose the profile you wish to be automatically activated when your phone is connected to a car kit.

Automatic answer—Calls are answered automatically after one

ring when a car kit is connected. Select *On* or *Off*.

Lights—Choose to keep the phone lights always on, or to shut off automatically after several seconds. Select *On* or *Automatic*.

Loopset

The LPS-4 Loopset is recommended for use with your phone. Scroll to the option of your choice, and press *Select* to enter the submenu and modify its settings.

Default profile—Choose the profile you wish to be automatically activated when your phone is connected to a loopset.

Automatic answer—Calls are answered automatically after one ring when a loopset is connected. Select *On* or *Off*.

Charger

Scroll to the option of your choice, and press *Select* to enter the submenu and modify its settings.

Default profile—Choose the profile you wish to be automatically activated when a charger is connected

Lights—Choose to keep the phone lights always on, or to shut off automatically after several seconds. Select *On* or *Automatic*.

■ Security settings

If your wireless service provider supports these features, you may be able to change certain security settings in your phone such as *Phone lock*, *Allowed number when lock active*, *Change lock code*, *Call restrictions*, and *Voice privacy*.

Phone Lock

The lock code controls access to features in the *Security settings* menu, as well as the security of your phone. The preset code is 0000.



Note: If you enter the wrong lock code 5 times in succession, you will not be able to enter a code for 5 minutes, even if you power off the phone between incorrect entries.

Activate or deactivate phone lock

The phone lock feature protects your phone from unauthorised outgoing calls or unauthorised access to information stored in the phone. When phone lock is activated, *Phone locked* is displayed each time you turn your phone on or off.



Important: *Call not allowed* is displayed if you attempt to place a call while phone is locked. However, calls may be possible to the official emergency number programmed into your phone.

1. At the standby mode, select *Menu > Settings > Security settings > Phone lock*.
2. Enter the lock code, and press *OK*. (See *Change lock code*, 58 for more information.)
3. Select *Phone lock* and one of the following options:
 - Off*—Immediately turns off the phone lock feature.
 - Lock now*—Immediately turns on the phone lock feature.
 - On power-up*—The phone will be locked when you power on again.

To answer a call with phone lock on, press *Answer* or the *Talk* key.

Allow numbers when phone locked

When phone lock is on, the only outgoing calls that can be made are to the following numbers:

- The emergency number programmed into your phone (for example, 111).

- The number stored in the *Allowed number when lock active* location.
- 1. At the start screen, select *Menu > Settings > Security settings*.
- 2. Enter the lock code, and press *OK*. (See [Change lock code, 58](#) for more information.)
- 3. Select *Allowed number when lock active*.
- 4. Highlight an empty slot, and select *Assign*.
- 5. Enter the phone number, or press *Search*, recall the number from the phone book, and press *OK*.

To call the allowed phone number:

1. Enter the phone number at the start screen.
2. Press the **Talk** key to place the call.

Change lock code



Note: Avoid using codes similar to emergency numbers such as 111 to prevent accidental dialling of the emergency number.

Once you change the lock code, keep the new code secret and in a safe place separate from your phone.

1. At the standby mode, select *Menu > Settings > Security settings*.
2. Enter the current lock code, and press *OK*.

3. Select *Change lock code*.
4. Enter the new lock code (4 characters), and press *OK*.
5. Enter the new lock code again, and press *OK*.

Call Restrictions

Call restrictions is a network service. See [Network services, ix](#) for more information.

If your wireless service providers supports this feature, then you can restrict the calls your phone can make and receive. When calls are restricted, calls still may be possible to the official emergency number programmed into your phone.



Note: Contact your service provider for the restriction password.

1. At the standby mode, select *Menu > Settings > Security settings*.
2. Enter the lock code and press *OK*. (See [Change lock code, 58](#) for more information.)
3. Select *Call restrictions* and choose the type of calls you wish to restrict:
 - Restrict outgoing calls*—Calls cannot be made.
 - Restrict incoming calls*—Calls cannot be received.

4. Scroll to an option (*Select*, *Add restriction*, *Edit*, or *Delete*), and press *Select*.

Voice privacy

Voice privacy is a network service. See [Network services, ix](#) for more information. If your wireless service provider supports this feature, the voice privacy feature protects the privacy of your current phone conversation from other callers placing phone calls on your same network.

1. At the standby mode, select *Menu > Settings > Security settings*.
2. Select *Voice privacy > On* or *Off*.

Network

The following features are network services. See [Network services, ix](#) for more information. The menu options you see in your phone are based on your service provider's network. The network determines which options actually appear in the phone menu. Check with your service provider for more information.

The *Network* menu allows you to personalise the way your phone chooses a network in which to operate while you are within or outside of your primary or home system. Your phone is set to search for the most cost-effective network. If your phone cannot find a preferred

network, it selects a network automatically based on the option you choose in the *Network* menu.

1. At the standby mode, select *Menu > Settings > Network*.
2. Scroll to one of the following options and press *Select*:

Home only—You can make and receive calls in your home area only. While roaming, *No service* appears and you cannot make or receive calls.

Automatic A—The phone automatically roams to another digital network. The roaming rate applies when not in the home service area.

Automatic B—The phone automatically searches for service in another digital network. If one is not found, the phone uses analog service. The roaming rate applies when not in the home service area.

3. Press *OK*, if necessary, to confirm the activation.

Network services

The following features are network services. See [Network services, ix](#) for more information.

Call diverting

Call diverting tells your network to redirect incoming calls to another number. Call diverting may not work

the same in all networks, so contact your wireless provider for availability.

Activate

1. At the standby mode, select *Menu > Settings > Network services > Call diverting*.
 2. Select one of the following options:
 - Divert all calls*—Divert all calls to the number you specify.
 - Divert if busy*—Divert incoming calls when you are in a call.
 - Divert if not answered*—Divert incoming calls to another number if you are unable to answer. You can set a delay before diverting takes place.
 - Divert if out of reach*—Divert incoming calls when your phone is off.
 - Cancel all call diverting*—Cancel any call diverting options you have set.
- Note:** All options listed may not appear in the display, depending on the feature code you have entered. Contact your wireless provider for more information.
3. Select *Activate*.
 4. Scroll to the destination to which your calls will be diverted and press *Select*.

5. Enter the number to which your calls, data, or other information will be diverted and press *OK*.

Cancel

At the standby mode, select *Menu > Settings > Network services > Call diverting > Cancel all call divers*.



Note: *Cancel all call divers* may affect your ability to receive voice mail messages. Contact your wireless provider for specific details.

Call waiting

If your wireless provider supports this feature, call waiting notifies you of an incoming call even while you are in a call. You can then answer, silence, or ignore the incoming call.

1. During a call, press *Answer* or the *Talk* key to answer the waiting call.
The first call is put on hold.
2. Press the *End* key to end the active call.

Send own caller ID when calling

If your wireless service provider supports this feature, then you can prevent your number from appearing on the receiving party's caller ID.

At the standby mode, select *Menu > Settings > Network services > Send my caller ID > Yes* or *No*.

Store a feature code

1. At the standby mode, select *Menu > Settings > Network services > Network feature setting*.
2. Enter the feature code from your service provider (for example, *633 for activating *Divert if busy*), and press *OK*.
3. Press *Select* when *Call diverting* is displayed.
4. Scroll to the type of diverting that matches the feature code you entered (for example, *Divert if busy*), press *Select > Activate*.
The activated feature code is now stored in your phone, and you are returned to the *Feature code:* field. Continue entering other feature codes (for example, *633 to cancel *Divert if busy*), or press the *End* key to return to the standby mode.



Note: Once you enter a network feature code successfully the feature becomes visible in the *Network services* menu.

View your own phone number

At the standby mode, select *Menu > Settings > Network services > Own number selection*.

■ Restore factory settings

You can reset some of the menu settings to their original values. Data that you have entered or downloaded is not deleted, for example, entries in your contacts list are not affected.

1. At the standby mode, select *Menu > Settings > Restore factory settings*.
2. Enter the lock code, and press *OK*. (See *Change lock code*, 58 for more information.)

9. Voice



■ Voice dialling

You can dial up to 25 stored numbers using voice dialling (voice tags).

Before using voice tags, note that:

- Voice tags are not language dependent. They are dependent on the speaker's voice.
- You must say the name exactly as you said it when you recorded it.
- Voice tags are sensitive to background noise. Record voice tags and use them in a quiet environment.
- Very short names are not accepted. Use long names and avoid similar names for different numbers.



Note: Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialling in all circumstances.


Assign a voice tag to an entry

Before you can use voice dialling, you must first assign a voice tag to the number.

1. At the standby mode, use the **Scroll down** key to enter the contacts list.
2. Highlight the contact you want to assign a voice tag, select *Details > Options > Add voice tag > Start*.
3. Speak clearly into the microphone.



Note: Do not press *Quit* unless you want to cancel the recording.

The phone automatically stops recording and saves and replays the voice tag. The  icon appears next to commands which have voice tags assigned.

If recording is not successful, your phone displays an error message. Press *Options > Add voice tag* and repeat Step 3.

Dial a number

1. Press and hold *Contacts* (or *Go to*).
2. When you hear several beeps and *Speak now* appears, release the key.
3. Pronounce the voice tag clearly into the microphone.

When the phone finds the voice tag, *Found:* appears, and the phone automatically dials the number. If the phone does not locate a number or recognise the voice tag, *No match found* appears.

Options

After you have associated a voice tag to a contact, you can choose one of the following options:

Play back

1. Select *Menu > Voice > Voice tags*.
2. Scroll to the name with the voice tag you want to hear.
3. Select *Options > Playback*.

Change

1. Select *Menu > Voice > Voice tags*.
2. Scroll to the name with the voice tag you want to change.
3. Select *Options > Change*.
4. Press *Start*. The phone repeats your voice tag, and *Voice tag saved* appears.

Delete

1. Select *Menu > Voice > Voice tags*.
2. Scroll to the name with the voice tag you want to erase.
3. Select *Options > Delete*. *Delete voice tag?* appears.

4. Press *OK* to erase the voice tag.

Voice commands

You can set as many as 10 voice commands, which allow hands-free operation of certain phone features.


Add a voice tag

Before using voice commands, you must first add a voice tag to the phone function.

1. At the standby mode, select *Menu > Voice > Voice commands*.
2. Select the phone function you wish to tag (*Profiles, Voice mailbox, Voice recorder, or Call register*).
3. If necessary, scroll to an option associated with that function, and press *Select*.
4. Select *Options > Add command*.
5. Press *Start*, and speak the voice tag clearly into the microphone.



Note: Do not press *Quit* unless you want to cancel the recording.

The phone replays and then saves the recorded tag. The  icon appears next to commands which have voice tags assigned.

Activate a voice command

After you have associated a voice tag with a phone function, you can

issue a command by speaking the voice tag.

1. Press and hold *Contacts* (or *Go to*).
2. When *Speak now* appears, pronounce the voice tag clearly into the microphone.

When the phone finds the voice tag, *Found:* appears, and the phone plays the recognised voice tag through the earpiece. The function you requested is activated.

Options

After you have associated a voice tag to a command, you can choose one of the following options:

- Select *Playback* to listen to the voice command tag.
- Select *Change* to change the voice command.
- Select *Delete* to erase the voice command tag.

■ Voice recorder

This feature allows you to record pieces of speech or sound with your phone and listen to them later. You can also use recorded speech or sound as ring tone. The total available time is approximately 3 minutes if no memos have been stored.

The recorder cannot be used when a data call connection is active.

Record speech or sound

1. At the start screen, select *Menu > Voice > Voice recorder > Record*.
2. After the recorder start tone is heard, begin recording speech or sound.
3. When you are finished recording, press *Stop*.
4. Select *Recordings list > Recordings*. Use the **Scroll up** and **Scroll down** keys to move to the desired recording. Press *Options > Rename*. Enter the title you wish to assign to the recording, and press *OK*.

Options

After you have saved the recording, select *Menu > Voice > Voice recorder > Recordings list*, highlight the recording from the *Recordings* folder in the *Gallery* menu, and choose one of the following options:

Open—Open and play the selected recording.

Delete—Delete the selected recording from the *Recordings list*.

Rename—Edit the name of the selected recording.

Set as ring tone—Set the recording as the ring tone for your phone.

Details—View the name, size, date and time recorded, length, format, and copyright of the selected recording.

Sort—Sort the recordings in the *Recordings list* according to name, date, format, or size.

10. Gallery



You can save pictures and ringing tones to folders in the gallery, or create folders of your own and save them there. You can also download images, tones, or video clips using MMS, web sites, or Nokia PC Suite.

■ Open the gallery

At the standby mode, select *Menu > Gallery*. The following submenus are displayed:

View folders—Explore the folders in the gallery menu. See *View folders* in the following section for more info.

Add folder—Add a folder of your own.

Delete folder—Delete a folder you have created.

Rename folder—Rename a folder you have created.

■ View folders

1. At the standby mode, select *Menu > Gallery > View folders > Images, Graphics, Clip-arts, Tones, Video clips, or Recordings > Open*.
2. Scroll through the list of images, graphics, clip-arts, video clips, tones or recordings, press *Options*. Scroll to the option you

want (*Open, Delete, Edit image, Move, Rename, Set as wallpaper, Set as ring tone, Details, Sort, or Open in sequence*) and press *Select* to enter its submenu.

■ Play a video clip

You can play a video clip that you have received as a multimedia message.

1. At the standby mode, select *Menu > Gallery > View folders > Video clips > Open*.
2. Scroll to the pre-loaded video clip you wish to play and press *Options > Play* or choose another option in the menu.

11. Games



Challenge yourself or a friend to one of the fun games in your phone.



Note: Some menus listed are network services. Contact your wireless provider for more information.

■ Play a game

1. At the standby mode, select *Menu > Games > Select game*.
2. Scroll to a game, and press the **Talk** key.
3. Select one of the following options (if supported by the particular game):
 - New game*—Launches a new game.
 - High scores*—View the high scores for this game (if previously played).
 - Instructions*—View instructions for playing the game. Use the **Scroll down** key to read more.

■ Game settings

1. At the start screen, select *Menu > Games*.
2. Scroll to one of the following game submenus:

Select game—Select a game or enter a game option list. See [Game options, 67](#) for more information.

Memory—Check the available memory for games and game-related applications.

Settings—Turn *Game sounds*, *Game lights*, and *Shakes > On* or *Off*.

3. Press *Select* to enter the submenu and choose other settings.

■ Game options

1. While viewing the games list, press *Options*.
2. Scroll to an option (*Open*, *Delete*, or *Details*), and press *Select* to activate the option or enter a submenu.

12. Minibrowser



Minibrowser is a network service. See [Network services, ix](#) for more information.

Your phone has a built-in browser you can use to connect to selected services on the mobile internet. If your wireless service provider supports this feature, then you can view weather reports, check news or flight times, view financial information, and much more. The web browser on your phone can display WAP-based content.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security and content, as you would with any internet site.

The security icon does not indicate that the data transmission between the gateway and the content server (or place where the requested resource is stored) is secure. The service provider secures the data transmission between the gateway and the content server.

■ Mobile internet access

Because mobile internet content is designed to be viewed from your phone, your wireless provider is now your mobile internet service provider as well.

It is likely that your wireless provider has created a home page and set up your browser to go to this page when you log on to the mobile internet. Once at your service provider's home page, you may find links to a number of other sites.

It should not be necessary to manually configure the browser on your phone. Normally this is done by your wireless provider once you have subscribed to the feature. Contact your wireless provider if you have problems using the browser.

■ Sign on to the mobile internet

At the standby mode, select *Menu > Minibrowser > Connect*.

After a brief pause, your phone attempts to connect to a home page. If you receive an error message, your phone may not be set up for browsing. Contact your wireless provider to make sure that your phone is configured properly.

■ Navigate the mobile internet

Since your phone screen is much smaller than a computer screen, mobile internet content is displayed differently than you may be accustomed to seeing. This section contains guidelines for using phone keys to navigate a WAP site.

Phone keys

- To browse the WAP site, press the **Scroll up** key or the **Scroll down** key.
- To select a highlighted item, press *Select*.
- To enter letters and numbers, press a key from 0–9.
- To enter special characters, press the * key.

To end a data connection and make a phone call

To end your mobile internet connection, press the **End** key as many times as needed to clear the display and ready the phone for calls, or simply press and hold the **End** key.

Make an emergency call while online

You can make an emergency call while online.

- Enter the emergency number for your present location (for example, 111). Emergency numbers vary by location.
- Press the **Talk** key.

Clear the cache and disconnect

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you accessed is stored in the cache. To empty the cache while in the browser menu, select **Navigate > Advanced > Clear > Cache** from the home page. You can also clear the cache by pressing and holding the **Power** key to power off your phone.

To close your mobile internet connection while browsing, press and hold the **End** key.


13. Applications




Some functions of the *Applications* menu are network services. See [Network services, ix](#) for more information.

You may find useful Java™ utilities pre-installed on your phone. Also, you can manage and download new Java applications that may be offered by your wireless provider.

■ Launch


 Note: You can quickly open an application by scrolling to it and then pressing the Talk key.


1. At the standby mode, select *Menu > Applications > Select application*.
2. Scroll to an application, and press *Options*, highlight *Open*, and press *Select* or the Talk key.

 Note: An application may require a few seconds to load. When you open an application, wait for the launch screen to disappear. At that point, the application is ready.

■ Downloads

You may be able to download new Java applications using the Minibrowser in your phone or the Java Application installer from Nokia PC Suite.

 Note: Only install applications from sources that offer adequate protection against harmful software.

 Note: When you download a game or an application, it may be saved in the *Games* menu instead of the *Applications* menu.

Application downloads

1. At the standby mode, select *Menu > Applications > App. downloads*.
2. Press *Select* to access the list of web browser bookmarks.
3. Scroll to the appropriate bookmark that contains the application you wish to download, and press *Select* to connect to the web page.

If the connection fails, you may enter the *Applications* menu and activate another set of service settings.

Installing Java applications

Use the Java Application Installer from Nokia PC Suite to download the applications in your phone. See [PC Suite, 73](#) for more information.

■ Memory status

You can view the size of memory available for game and application installations. At the standby mode, select *Menu > Applications > Memory*.

14. Go To



To access specific functions quickly, select *Menu > Go to* and select the desired function from the list.

To sort, remove, or add more functions to the list, see [Choose 'Go to' functions, 48](#) and [Organise functions, 48](#).

15. PC Suite

Nokia PC Suite software is available for the Nokia 3125 phone. Nokia PC Suite is a collection of powerful tools that you can use to manage your phone features and data. Each component is a separate program that includes online helps. Nokia PC Suite software, installation instructions, and other documentation is provided free of charge and can be downloaded from the software downloads of the Nokia web site: <http://www.nokia-asia.com>

16. Enhancements



Check the model number of any charger before use with this device. This device is intended for use when supplied with power from ACP-12 or ACP-7 charger.



Warning: Use only batteries, chargers and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

Your device and its enhancements may contain small parts. Keep them out of reach of small children.

A few practical rules about accessories and enhancements:

- Keep all accessories and enhancements out of the reach of small children.
 - When you disconnect the power cord of any accessory or enhancement, grasp and pull the plug, not the cord.
- Check regularly that enhancements installed in a vehicle are mounted and are operating properly.
 - Installation of any complex car enhancements must be made by qualified personnel only.

For availability of approved enhancements, please check with your dealer.

17. Reference information

This section provides information about your phone's batteries, enhancements, chargers, safety guidelines and technical information. Be aware that the information in this section is subject to change as batteries, chargers, and enhancements change.

■ Batteries and chargers

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, buy a new battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger after the battery has finished charging. Overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. Temperature extremes

can affect the ability of your battery to charge.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C. A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle

when possible. Do not dispose as household waste.

■ Battery information

This section provides information about battery charging times with the Travel Charger (ACP-12) and the Standard Travel Charger (ACP-7), talk-times, and standby times. Be aware that the information in this section is subject to change. For more information, contact your service provider.

Charging times

The following charging times are approximate with the BL-5C 900 mAh Li-Ion battery:

ACP-12: 1.5 hours

ACP-7: 3.25 hours

Talk and standby times

Operation times are estimates only and depend on signal strength, phone use, network conditions, features used, battery age and condition (including charging habits), temperatures to which the battery is exposed, and many other factors.

Talk time: 3.8 - 5.6 hours

Standby time: 38 - 189 hours

18. Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage and enjoy your device for many years.

- Keep the device dry.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before removing it.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorised service facility for service.

19. Additional safety information

■ Operating environment

Remember to follow any special regulations in force in any area and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions.

To maintain compliance with radio frequency exposure guidelines only use enhancements approved by Nokia for use with this device. When the device is on and being worn on the body, always use an approved carrying case.

■ Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions.

Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

PACEMAKERS

Pacemaker manufacturers recommend that a minimum separation of 6 in (15.3 cm) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research

by and recommendations of Wireless Technology Research. To minimise the potential for interference, persons with pacemakers should

- Always keep the device more than 6 inches (15.3 cm) from their pacemaker when the device is switched on
- Not carry the device in a breast pocket
- Hold the device to the ear opposite the pacemaker

If you have any reason to suspect that interference is taking place, switch off your device immediately.

HEARING AIDS

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

■ Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, air bag systems. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added.

Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any

warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

■ Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, chemical plants or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains

chemicals or particles such as grain, dust or metal powders.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless devices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, legal action, or both.

■ Emergency calls



Important: Wireless phones, including this phone, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless phone for essential communications like medical emergencies.

To make an emergency call:

1. If the phone is not on, switch it on. Check for adequate signal strength. Some networks may require that a valid UIM card is properly inserted in the phone.
2. Press the End key as many times as needed to clear the display and ready the phone for calls.
3. Key in the official emergency number for your present location. Emergency numbers vary by location.
4. Press the Talk key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide or your service provider. When making an emergency call, give all the necessary information as accurately as possible. Your wireless phone may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

■ Certification information (SAR)

THIS MODEL PHONE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg*. Tests for SAR are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

The highest SAR value for this model phone when tested for use at the ear is 0.73 W/kg. While there may be

differences between the SAR levels of various phones and at various positions, they all meet the relevant international guidelines for RF exposure.

This product meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body.

* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at www.nokia.com.

Index

A

- alarm clock 38
- antenna 6
- anykey answer 48
- applications 70
 - download 70
 - launch 70
- automate voicemail 26
- automatic keyguard 51
- automatic redial 49
- automatic update of service 49
- auto-update 54

B

- back cover
 - removing 6
 - replacing 7
- banner 53
- batteries and chargers 75
- battery 6, 75, 76
 - charging 7
 - charging times 76
 - removing 6
 - replacing 7
 - talk and standby times 76
- battery information 76
- business cards 36

C

- calculator 42
- calendar 39
- call diverting 59
- call register 28
- call settings 48
- call summary 51
- call waiting 60
- caller groups 33
- calling cards 49
- calls
 - answering 10
 - in-call options 10
 - making 9
- calorie counter 45
- care and maintenance 77
- Certification information (SAR) 81
- charger 56
 - connecting 7

- information 75
- times 76
- clear the cache 69
- clip-arts 66
- colour schemes 55
- contacts 32
 - add 32
 - delete 35
 - edit 34
 - send 36
 - settings 36
 - view 35
- countdown timer 43
- covers
 - changing 8
- currency converter 42

D

- data transfer 51
- data/fax calls 50
- delete
 - call registers 29
- dictionary mode 12
- display brightness 55
- display settings 54
- distribution list 17
- download
 - applications 70
- DTMF tones 52
- duration of call 29

E

- electronic serial number x
- emergency calls 79
 - with keypad locked 52
- enhancement settings 56
 - charger 56
 - handsfree 56
 - headset 56
 - loopset 56
- enhancements 74
- exchange rate 43

F

- feature codes 61

G

- gallery 66
- games 67
- go to 48, 72
- organise 48

H

- handsfree 56
- headset 8, 56
- help x
- help text 4, 53

I

- indicators and icons 2
- international dialling prefix 50

K

- keyguard 11

L

- languages 51
- Limited Warranty 82
- lock code 57, 58
- loopset 56
- loudspeaker 10

M

- menu
 - applications 70
 - call register 28
 - contacts 32
 - gallery 66
 - games 67
 - go to 72
 - messages 14
 - minibrowser 68
 - organiser 38
 - settings 47
 - voice 62
- menu view 55
 - grid 55
 - list 55
- messages
 - delete 24
 - minibrowser messages 27
 - multimedia messages 19
 - text messages 14
 - voice messages 25

- minibrowser messages 27
- mobile Internet 68
 - navigate 69
 - sign off 69
 - sign on 68
- multimedia messages 19

N

- network 59
- network services ix, 59
- Nokia PC Suite 71

O

- organiser 38

P

- personal shortcuts 48
- phone lock 57
- phone number 61
- phone settings 51
- power 7
- profiles 47
 - activate 47
 - personalise 47
 - timed 47

Q

- quick keys 2

R

- recordings 64
 - save as ring tone 64
- restore factory settings 61
- restrict calls 58
- right selection key 48
- roaming 59

S

- safety vii
 - important safety information 78
- SAR value 81
- screen saver 55
- screen savers 66
- scrolling 4
- security settings 57
- send own caller ID 60

set

- date 54
- time 53
- settings 47
- shared memory ix
- shortcuts 4
- special characters 12
- speed dialling 33, 49
- Standby mode 2
- start-up tone 52
- stopwatch 44

T

- talk and standby times 76
- text entry 12
 - dictionary mode 12
 - standard 12
- text messages 14
- time and date settings 53
- To-do list 42
- tone settings 55
- tones 66
- turn phone off 7
- turn phone on 7

U

- user interface 3

V

- video clips 66
 - play 66
- view
 - data/fax call duration 30
 - dialled numbers 29
 - duration of call 29
 - minibrowser duration 30
 - missed calls 28
 - received calls 28
 - time of call 29
- voice 62
- voice commands 63
- voice dialling 62
- voice messages 25
- voice privacy 59
- voice recorder 64
- voicemail 25
- volume
 - adjusting 10
 - using the loudspeaker 10

W

- wallpaper 54
- welcome note 52

X

- Xpress-on covers 8