



## Video recorder for Nokia 7650 mobile phone

9355937  
Issue 1

Copyright © 2003 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

# Contents

<b>Video recorder.....</b>	<b>4</b>
Downloading the Video recorder installation package.....	4
Installing Video recorder.....	5
Recording a video clip.....	5
Playing a video clip.....	6
Renaming a video clip .....	6
Deleting a video clip.....	6
Sending a video clip.....	6
Receiving a video clip in a message.....	7
Uninstalling Video recorder .....	7



# 1. Video recorder

← Go to **Menu** → **Video recorder**.

**!** Refer to the User's Guide of the product for instructions on operation, care and maintenance, including important safety information.

**▶ Note:** Obey all local laws governing the recording of videos. Do not use this feature illegally.

**▶ Note:** Your phone must be switched on to use the Video recorder. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

With the Video recorder you can record video clips and play video clips stored on your phone.

**▶ Note:** Video Recorder needs 300 kB of free memory to run properly.

To view what kind of data you have and how much memory the different data groups consume, go to **Menu** → **Tools** → **Manager** and move the joystick to the right to open the Memory view.



*Fig. 1 Recording a video clip*

## Downloading the Video recorder installation package

The Video recorder installation package is available for download at the URL link [www.nokia-asia.com/apc/n7650\\_mmp](http://www.nokia-asia.com/apc/n7650_mmp).

# Installing Video recorder

For instructions on how to install the Video recorder installation package (a file with the extension .SIS) refer to the Nokia 7650 mobile phone's User's Guide. You can find the instructions in the Application manager section of the Tools chapter.

## Recording a video clip

You can record video clips up to 95 KB in size (approximately 15 seconds in duration). Recorded video clips are in the .3GP format.



**Glossary:** The 3GPP file format (.3GP) is the standard video file format for multimedia messaging.

- 1 Open the sliding keypad.
- 2 To begin recording, first select "video recorder" to open the application, then select **Options** → *Record*. The Video recorder application opens and you can see the view to be recorded. See Fig 1, p. 4.
- 3 To start recording, press **Start**. The progress bar at the bottom of the display shows you how much recording time is left. To pause recording at any time press **Pause**.

Options in the main view:  
*Play, Record, Send, Delete, Rename, About, and Exit.*



Fig. 2 The main view shows a video clip list

- To stop recording press **Stop**. The video clip is automatically saved in the phone's memory.

**Note:** The recording stops automatically when the 95 KB limit (approximately 15 seconds) is reached.

 
## Playing a video clip

To play a video clip, scroll to it and press the joystick or select **Options** → *Play*.

## Renaming a video clip

To rename a video clip, scroll to it and select **Options** → *Rename*.

## Deleting a video clip

To delete a video clip, scroll to it and press  or select **Options** → *Delete*.

## Sending a video clip

- In the main view, scroll to the video clip you want to send and select **Options** → *Send*.
- Select a method of sending your video clip to a compatible device: via *MMS*, *e-mail*, *Bluetooth*, or *Infrared*.


## Receiving a video clip in a message

To view your messages, go to the [Messaging](#) application.

When you receive a video clip in a supported format in a multimedia message, *Video clip added* is displayed in the subject field. If you want to play the video or save it, open the message and select [Options](#) → [Objects](#).

When you receive a video clip in a supported format as an e-mail attachment, open the message and select [Options](#) → [Attachments](#) if you want to play the video or save it.

## Uninstalling Video recorder

 **Note:** After you have uninstalled the Video recorder application, you can no longer send, view or delete your video clips. You have to install the application again if you want to manage any video clips.

For instructions on how to uninstall the Video recorder, refer to the Nokia 7650 mobile phone's User's Guide. You can find the instructions in the Application manager section of the Tools chapter.

