


NOKIA N75

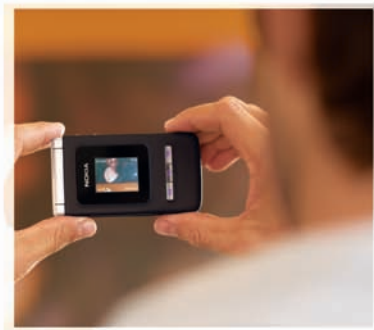

Additional applications

Nokia N75

ABOUT ADD-ON APPLICATIONS FOR YOUR NOKIA N75

In the memory of your device and on the CD-ROM supplied with the device you will find additional applications from Nokia and third-party developers. The content and the availability of applications and services may vary by country, retailer and/or network operator. The applications and further information about the use of the applications at www.nokia.com/support are available in selected languages only. Some operations and features are SIM card and/or network dependent, MMS dependent, or dependent on the compatibility of devices and the content formats supported. Some services are subject to a separate charge.

NO WARRANTY

The third party applications provided in the memory of your device and on the CD-ROM supplied with the device, and discussed in this guide have been created and are owned by persons or entities that are not affiliated with or related to Nokia. Nokia does not own the copyrights and/or intellectual property rights to these third party applications. As such, Nokia does not take responsibility for any end user support or the functionality of these third party applications, nor the information presented in the applications or these materials. Nokia does not provide any warranty for these applications.

YOU ACKNOWLEDGE THE SOFTWARE AND/OR APPLICATIONS (COLLECTIVELY, THE "SOFTWARE") ARE PROVIDED AS IS WITHOUT WARRANTY OF ANY KIND EXPRESS OR IMPLIED AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. NEITHER NOKIA NOR ITS AFFILIATES MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF TITLE, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR THAT THE SOFTWARE WILL NOT INFRINGE ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADEMARKS, OR OTHER RIGHTS. THERE IS NO WARRANTY BY NOKIA OR BY ITS AFFILIATES THAT ANY ASPECT OF THE SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE. YOU ASSUME ALL RESPONSIBILITY AND RISK FOR THE SELECTION OF THE SOFTWARE TO ACHIEVE YOUR INTENDED RESULTS AND FOR THE INSTALLATION, USE AND RESULTS OBTAINED FROM IT. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL NOKIA, ITS EMPLOYEES OR AFFILIATES BE LIABLE FOR ANY LOST PROFITS, REVENUE, SALES, DATA, INFORMATION OR COSTS OF PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, PROPERTY DAMAGE, PERSONAL INJURY, INTERRUPTION OF BUSINESS, OR FOR ANY DIRECT, INDIRECT, INCIDENTAL, ECONOMIC, COVER, PUNITIVE, SPECIAL OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND WHETHER ARISING UNDER CONTRACT, TORT, NEGLIGENCE,

OR OTHER THEORY OF LIABILITY ARISING OUT OF THE INSTALLATION OR USE OF OR INABILITY TO USE THE SOFTWARE, EVEN IF NOKIA OR ITS AFFILIATES ARE ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME COUNTRIES/STATES/JURISDICTIONS DO NOT ALLOW THE ABOVE EXCLUSION OR LIMITATION OF LIABILITY, BUT MAY ALLOW LIABILITY TO BE LIMITED, IN SUCH CASES, NOKIA, ITS EMPLOYEES' OR AFFILIATES' LIABILITY SHALL BE LIMITED TO 50 EURO. NOTHING CONTAINED IN THIS DISCLAIMER SHALL PREJUDICE THE STATUTORY RIGHTS OF ANY PARTY DEALING AS A CONSUMER.

Copyright © 2007 Nokia. All rights reserved. Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation.

Other product and company names mentioned herein may be trademarks or trade names of their respective owners.

Changes and improvements to the products described in this document are possible without prior notice. Availability may vary by country and region.

NOKIA CORPORATION
NOKIA MULTIMEDIA MARKETING
WWW.NOKIA.COM

ISSUE 1 EN, 9252456

Contents

Introduction.....	4	Download!.....	13
Quickoffice	5	Settings wizard.....	14
Adobe Reader	7	Zip manager.....	16
Lifelog	9	Adobe Photoshop Album Starter Edition	17
Nokia PC Suite	12		

Introduction

Model number: Nokia N75

Your Nokia N75 is a powerful, intelligent multimedia device. There are various applications provided by Nokia and different third-party software developers to help you do more with your Nokia N75.

Some of the applications may be provided in the device memory, on the CD-ROM (if supplied with the device), or on the internet.

Availability of the applications may vary according to your country or sales area.

To use some applications, you must accept the applicable license terms. Some of the applications may allow use during a free trial period before requiring payment.

Throughout this document, icons indicate if the application is available in the device software (■), or on the CD-ROM (Ⓞ).



Note: You must install the applications on the CD-ROM to a compatible PC before using them.

Network services

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Support

Applications provided by third-party software developers are supported by these developers. If you experience problems with an application, obtain support from the relevant Web site. See the Web links at the end of each application in this guide.

Quickoffice



Quickoffice

To use the Quickoffice applications, press **⌘**, and select **Office > Quickoffice**. A list of files in the .doc, .xls, .ppt, and .txt file formats saved in the device opens.

To open a file in its respective application, press **⌘**. To sort files, select **Options > Sort files**.

To open **Quickword**, **Quicksheet**, or **Quickpoint**, press **⌘** to reach the desired view.

Quickword

With **Quickword**, you can view native Microsoft Word documents on the display of your device. **Quickword** supports colors, bold, italics, and underline.

Quickword supports the viewing of documents saved in .doc format in Microsoft Word 97, 2000, and XP, and Palm eBooks in .doc format. Not all variations or features of the mentioned file formats are supported.

View Word documents

To move in the document, use the scroll key.

To search the document for text, select **Options > Search**.

You can also select **Options** and from the following:

Go to—to move to the start, end, or selected position within the document

Zoom—to zoom in or out

Start Autoscroll—to start automatic scrolling through the document. To stop scrolling, press **⌘**.

Quicksheet

With **Quicksheet**, you can read Microsoft Excel files on the display of your device.

Quicksheet supports the viewing of spreadsheet files saved in .xls format in Microsoft Excel 97, 2000, 2003, and XP. Not all variations or features of the mentioned file formats are supported.

View spreadsheets

To move around in the spreadsheet, use the scroll key.

To switch between worksheets, select **Options** > **Pan**.

To search the spreadsheet for a text within a value or formula, select **Options** > **Search**.

To change how the spreadsheet is displayed, select **Options** and from the following:

Zoom—to zoom in or out

Freeze panes—to keep the highlighted row, column, or both visible while you move in the spreadsheet

Resize—to adjust the size of columns or rows

Quickpoint

With **Quickpoint**, you can view Microsoft PowerPoint presentations on the display of your device.

Quickpoint supports the viewing of presentations created in .ppt format in Microsoft PowerPoint 97, 2000, and XP. Not all variations or features of the mentioned file formats are supported.

View presentations

To move between the slide, outline, and the notes view, press ◀ or ▶.

To move to the next or previous slide in the presentation, press ▲ or ▼.

To view the presentation in full screen, select **Options** > **Full screen**.

To expand items in the presentation outline in the outline view, select **Options** > **Expand entry**.

More information

If you experience problems with **Quickword**, **Quicksheet**, or **Quickpoint**, visit www.quickoffice.com for more information. Support is also available by sending an e-mail to supportS60@quickoffice.com.


Adobe Reader




Adobe reader

With Adobe Reader you can read PDF documents on the display of your device.

This application has been optimized for PDF document content on handsets and other mobile devices, and provides only a limited set of features compared with PC versions.



 **Note:** This application is only available in a limited number of languages.

To access and open documents:

- Press , and select **Office > Adobe PDF**. Select **Options > Browse for file** to browse and open documents stored in the device memory and on a compatible memory card.
- Open an e-mail attachment from received e-mail messages (network service).
- Send a document using Bluetooth connectivity to your **Inbox** in **Message**.
- Use **File mgr.** to browse and open documents stored in the device memory and on the memory card.

- Browse Web pages. Ensure your device is set up with an Internet access point before browsing. For more information on access points, see the user guide for your device.

Manage PDF files

To browse and manage PDF files, press , and select **Tools > Adobe PDF**. Your recent files are listed in the file view. To open a document, scroll to it, and press .

You can also select **Options** and from the following:

Browse for file—to browse for PDF files in the device memory or on a compatible memory card.

Settings—to modify default zoom level and viewing mode of PDF documents.

View PDF files

When a PDF file is open, select **Options** and one of the following:

Zoom—to zoom in, out, or to a selected percentage. You can also resize the document to the screen width, or fit the whole PDF page to the screen.

Find—to search the document for a text.

View—to view the document in full screen. You can also rotate the PDF document by 90 degrees in either direction.

Go to—to move to a selected page, next page, previous page, first page, or last page.

Save—to save the file to device memory or a compatible memory card.

Settings—to modify default zoom level and default viewing mode.

Details—to display the properties of the PDF document.

More information

For more information, visit www.adobe.com.

To share questions, suggestions, and information about the application, visit the Adobe Reader for Symbian OS user forum at www.adobe.com/support/forums.

Lifeblog



Lifeblog

Nokia Lifeblog is a combination of software for mobile phone and PC that keeps a multimedia diary of the items that you collect with your device. Nokia Lifeblog automatically organizes your photos, videos, sounds, text messages, multimedia messages, and weblog posts into a chronology that you can browse, search, share, publish, and back up. Both Nokia Lifeblog for PC and Nokia Lifeblog for mobile phone let you send or blog your items for others to see.

Nokia Lifeblog for mobile phone automatically keeps track of your multimedia items. Use Nokia Lifeblog on your device to browse your items, send them to others, or publish them on the Web. Connect your device to a compatible PC using a USB data cable or Bluetooth connectivity to transfer and synchronize the items on the device with your compatible PC.


Nokia Lifeblog for PC provides easy browsing and searching of the items that you collected with your device. With one-button transfer using a USB data cable or Bluetooth connectivity, your favorite photos, videos, text, and multimedia messages are transferred back to your device.

For safekeeping, you can back up your Nokia Lifeblog database using your hard disk, CDs, DVDs, removable

drive, or network drive. Additionally, you can post items to your weblog (blog).



Note: This application is only available in a limited number of language

To start Lifeblog on your device, press , and select [Applications](#) > [Lifeblog](#) > [Options](#) > [Open](#).

Installation on your PC

Before you install Nokia Lifeblog on a compatible PC, you need the following:

- 1 GHz Intel Pentium or equivalent, 128 MB RAM
- 400 MB of available hard disk space (if Microsoft DirectX and Nokia PC Suite must be installed)
- Graphics capability of 1024x768 and 24-bit color
- 32 MB graphics card
- Microsoft Windows 2000 or Windows XP

To install Nokia Lifeblog on your PC:

- 1 Insert the DVD-ROM supplied with your device.
- 2 Install Nokia PC Suite (includes Nokia Connectivity Cable Drivers for USB connection).
- 3 Install Nokia Lifeblog for PC.

If Microsoft DirectX 9.0 is not already installed on your PC, it is installed at the same time with Nokia Lifeblog for PC.

Connect your device and your PC

To connect your device and a compatible PC using the USB data cable supplied with your device:

- 1 Ensure that you have installed Nokia PC Suite.
- 2 Connect the USB data cable to the device and the PC. When you connect your device to the PC for the first time after you have installed PC Suite, the PC installs the specific driver for your device. This may take a while.
- 3 Start the Nokia Lifeblog PC application.

To connect your device and a compatible PC using Bluetooth wireless technology:

- 1 Ensure that you have installed Nokia PC Suite on your PC.
- 2 Ensure that you have paired your device and the PC through Bluetooth wireless technology with **Get Connected** in Nokia PC Suite. See "Nokia PC Suite", p. 12, and the user guide for your device.
- 3 Activate Bluetooth connectivity on your device and on your PC. For details, see the user guide for your device and the documentation for your PC.

Copy items

When you have connected your device to a compatible PC using a USB data cable or Bluetooth connectivity, you can copy your items between your device and your PC.

To copy new or edited items from your device to your PC, and copy the selected items from your PC to your device:

- 1 Start the Nokia Lifeblog application on your PC.
- 2 In the Nokia Lifeblog PC application, select **File** > **Copy from phone and to Phone**.

The new items from your device are copied to your PC. The items on the **To phone** view on your PC are copied to your device.

Post to the Web

To share your best Nokia Lifeblog items, send them to your weblog on the Internet for others to see.

You must first create an account with a weblog service, create one or more weblogs that you use as the destination of your posts, and add the weblog account to Nokia Lifeblog. The recommended weblog service for Nokia Lifeblog is TypePad from Six Apart, www.typepad.com.

On your device, add the weblog account in Nokia Lifeblog in the weblog settings. On your PC, edit accounts in the **Edit log accounts** window.

To post items to the Web from your device:

- 1 In **Timeline** or **Favourites**, select the items that you want to post to the Web.
- 2 Select **Options** > **Post to Web**.

- 3 If you use the feature for the first time, Nokia Lifeblog retrieves a weblog list from the weblog server.
- 4 The weblog post dialog opens. Select the weblog you want to use from the **Post to:** list. If you have created new weblogs, to update the weblog list, select **Options > Refresh blog list**.
- 5 Enter a title and a caption for the post. You can also write a longer story or description in the body text field.
- 6 When everything is ready, select **Options > Send**.

To post items to the Web from your PC:

- 1 In **Timeline** or **Favourites**, select the items (a maximum of 50) that you want to post to the Web.
- 2 Select **File > Post to the Web....** The **Post to the Web** window opens.
- 3 Enter a title and a caption for the post. You can also write a longer story or description in the body text field.
- 4 Select the weblog that you want to use from the **Post to:** list.
- 5 When everything is ready, click the **Send** button.

Import items from other sources

In addition to the .jpeg images of your imaging device, you can also import .jpeg images and .3gp and .mp4 video clips, .amr sound files, and .txt text files from other sources (such as a CD, DVD, or folders on your hard disk) into Nokia Lifeblog.

To import images or videos from a compatible PC to Nokia Lifeblog for PC:

- 1 In **Timeline** or **Favourites**, select **File > Import from PC....** The **Import** window opens.
- 2 Browse the list to find the image or video file, or sound or text file from the list, or navigate to other folders to find the file that you want to import. Use the **Look in** list to browse other drives or appliances.
- 3 Select a folder, file, or several files. You can view their content in the **Preview:** pane.
- 4 Click **Open** to import the folder (including subfolders) or selected files.

Browse Timeline and Favorites

When you start Nokia Lifeblog on your PC, you have several ways to move around in the **Timeline** and **Favourites** views. The fastest way is to grab the slider handle and move it forward or backward, fast or slow. Alternatively, click the time bar to select a date, use the **Go to date...** feature, or use the arrow keys.

More information

For more information on weblog services and their compatibility with Nokia Lifeblog, visit www.nokia.com/lifeblog, or press **F1** in the Nokia Lifeblog PC application to open Nokia Lifeblog Help.

Nokia PC Suite



Nokia PC Suite ☉

Nokia PC Suite is a set of PC applications developed for use with your Nokia N75.

To install and use Nokia PC Suite, you need a PC that runs on Microsoft Windows 2000 or XP and is compatible with the provided USB cable, or with Bluetooth connectivity. Before using Nokia PC Suite, you need to install it on your PC. See the CD-ROM supplied with your device for more information.

A full user guide for Nokia PC Suite is available in electronic format on the CD-ROM. For further information, and to download the most recent version of Nokia PC Suite, visit www.nokia.com/pcsuite.

Some useful applications in Nokia PC Suite are:

Get Connected—to connect your device to a compatible PC for the first time

PC Sync—to synchronize contacts, calendar, to-do, and note items between your device and a compatible PC personal information manager (PIM)

Content Copier—to back up data from your device or restore saved data from the compatible PC to the device

Image Store—to store images and videos from your device to a compatible PC

Phone Browser—to manage the contents of your device folders through Windows Explorer

Music Manager—to create and organize digital music files on a compatible PC and transfer them to a compatible device

One Touch Access—to establish a network connection using your device as a modem

More information

For further information, and to download the most recent version of Nokia PC Suite, visit www.nokia.com/pcsuite.

Download!



Download!

With **Download!** (network service) you can discover, preview, buy, download, and upgrade content, services, and applications that work with your Nokia N75. Games, ringing tones, wallpapers, applications, and much more are right at hand. The items are categorized under catalogs and folders provided by different service providers. The available content depends on your service provider.

Press , and select **Download!**.

Download! uses your network services to access the most updated content. For information on additional items available through **Download!**, contact your network operator, service provider, or the supplier or manufacturer of the item.

Download! receives ongoing updates, bringing you the latest content your network operator or service provider offers for your device. To update the content in **Download!** manually, select **Options** > **Refresh list**.

To hide a folder or a catalog from the list, for example, to view only the items you use frequently, select **Options** > **Hide**. To make all the hidden items visible again, select **Options** > **Show all**.

To buy the selected item in the main view or in a folder or catalog, select **Options** > **Buy**. A submenu opens, where you

can select the version of the item and view price information. The available options depend on the service provider.

To download an item that is free of charge, select **Options** > **Get**.

Settings for Download!

The application updates your device with the most recent content available from your network operator or service provider and other available channels. To change the settings, select **Options** > **Settings** >

Access point—Select which access point is used to connect to the service provider's server, and whether to have the device to ask for the access point every time you use.

Automatic open—Select **Yes** if you want the content or application to be opened automatically after downloading.

Preview confirmation—Select **No** if you want to automatically download a preview of the content or application. Select **Yes** if you want to be asked separately each time before downloading a preview.

Buy confirmation—Select **Yes** if you want to be asked for confirmation before buying content or an application. If you select **No** the buying process starts immediately after you select the option **Buy**.

After you complete the settings, select **Back**.

Settings wizard




Settings wizard

Settings wizard configures your device for operator (MMS, GPRS, and mobile Internet), e-mail, push-to-talk (network service), and video sharing (network service) settings based on your wireless service provider information.

To use these services, you may have to contact your network operator or service provider to activate a data connection or other services.

Press , and select **Tools > Sett. wiz.**

Select the item from the menu that you want to configure your device for, and press .

E-mail

- 1 When you choose to configure your e-mail settings, **Settings wizard** detects your available network operator, and asks you to confirm it. Select **OK**, or scroll to another network operator, and select **OK**.
- 2 Select your e-mail service provider from the list.
- 3 Select the outgoing mail server. Use the default server if you are not sure.
- 4 **Settings wizard** prompts you to enter the details of your e-mail address, user name, and password. Select each in turn, and select **Options > Change**. Enter the details, and select **OK**.
- 5 Select **Options > OK** when you are finished.
- 6 Select **OK** to confirm that you want to set up the mailbox for the specified operator.
- 7 Select **OK**.

Push to talk

- 1 When you choose to configure your push-to-talk (**Push to talk**) (network service) settings, **Settings wizard** detects your available network operator, and asks you to confirm it. Select **OK**, or scroll to another network operator, and select **OK**.
- 2 Some operators require a user name, password, and nickname. Select each in turn, and select **Options > Change**. Enter the details, and select **OK**.
- 3 Select **Options > OK** when you are finished.
- 4 Select **OK** to confirm that you want to set up **Push to talk** for the specified operator.

Operator

- 1 When you choose to configure your operator settings, **Settings wizard** detects your available network operator and asks you to confirm it. Select **OK**, or scroll to another network operator, and select **OK**.
- 2 Select **OK** to confirm that you want to set up your device for the specified operator.

More information

If you experience any problems with **Settings wizard**, visit the Nokia phone settings Web site at www.nokia.com/phonesettings.

Zip manager



Zip manager

Use the **Zip manager** application to compress files. Compressed files use less memory and are more convenient to e-mail.

To open Zip manager, press **⌘**, and select **Office > Zip**.

Select **Options** and from the following:

New archive—Create a new archive file to store compressed ZIP formatted files

Add to archive—Add single or multiple compressed files or directories to an existing archive.

Delete—Delete files or directories from an existing archive.

Password—Set, clear, or change the archive password for protected archives.

Settings—Change the following settings: Compression level and Include subfolders.

You can store archive files on the device or on the memory card.

Adobe Photoshop Album Starter Edition



Adobe Photoshop Album Starter Edition

Adobe Photoshop Album Starter Edition 3.0 helps you to find, fix, and easily share your photos using a compatible PC. With this version of Starter Edition you can:

- Use tags to organize your photos so that they are easy to find.
- Use a calendar view to view all of your digital photos in one place.
- Fix common photo flaws in a single click.
- Share photos in many ways: send through e-mail, print at home, or send them to compatible mobile devices.



Note: This application is only available in a limited number of languages.

Installation

Install the Starter Edition application to your compatible PC from the CD-ROM provided with your device. Starter Edition requires the Microsoft Windows 2000 (Service Pack 4 or above), or XP operating system (Service Pack 2 or above), Nokia PC Suite 6.5 or later for connectivity between your device and PC, and Apple QuickTime 6.5.1. or later to view and edit video clips.

Nokia PC Suite can be found on the CD-ROM supplied with your device. If your system does not have Apple QuickTime installed, you can install it from www.apple.com/quicktime/download. Follow the on-screen installation instructions.

Transfer photos and video clips from Nokia N75 to PC

There are two ways to transfer your photos from your device to Starter Edition.

To transfer photos and video clips to a compatible PC automatically:

- 1 Connect your device to a compatible PC with the USB data cable provided with your device. On the PC, the **Adobe Photo Downloader** dialog box opens, and the new image and video files captured since the last transfer are automatically selected.
- 2 To start the transfer, click **Get Photos**. All selected files are imported to Starter Edition. Any albums you created in the **My Stuff** of your device will be automatically transferred into Starter Edition and identified as tags.
- 3 You can select to delete files from your device after they have been transferred to Starter Edition.

To enable or disable the automatic **Adobe Photo Downloader** dialog box, right-click the icon on the task bar.

To transfer photos to a compatible PC manually:

- 1 Connect your device to a compatible PC with the USB data cable or using Bluetooth connectivity.
- 2 Start the Starter Edition application.
- 3 In the shortcuts bar, click **Get photos > From Camera, Mobile Phone** or **Card Reader**. The **Adobe Photo Downloader** dialog box opens.
- 4 Click **Get Photos** to start the transfer. All selected files are imported to Starter Edition. Any albums you created in the **My Stuff** of your device will be automatically transferred into Starter Edition and identified as tags.
- 5 You can delete files from your device after they have been transferred to the Starter Edition.

Transfer photos and video clips from PC to Nokia N75

To transfer edited photos and video clips back to your device:

- 1 Connect your device to a compatible PC with the USB data cable or using Bluetooth connectivity.
- 2 Start the Starter Edition application.
- 3 Select the photos and videos you want to transfer to your device.

- 4 Click **Share** in the shortcuts bar, and select **Send to Mobile Phone**.
- 5 Click **OK**.

Organize and find photos by date

Starter Edition automatically organizes your photos by date so that they are easy to find. There are two ways to find photos by date: photo well and calendar view.

To find photos using the photo well:

- 1 Select **Photo Well** in the shortcuts bar.
- 2 In the timeline below the shortcuts bar, select the month of the photos you want to view. Photos from that month are shown in the photo well.

To find photos using the calendar view:

- 1 Select **Calendar View** in the shortcuts bar.
- 2 In the calendar view, select a day with a photo to view all the photos taken that day.
- 3 Scroll from month to month with the arrow buttons at the top of the calendar.

Organize and find photos using tags

Find photos by using keyword tags based on the people, place, event, and other characteristics of the photo. When you tag your photos, you do not have to remember the file name, date, or folder for each photo. Click **Organize** in the shortcuts bar to open the **Tag** pane.

To create your own tag:

- 1 Click **New** in the **Tag** pane, and select **New Tag**.
- 2 In the **Create Tag** dialog box, use the **Category** menu to choose which subcategory you want to list the tag under.
- 3 In the **Name** text box, enter the name you want to give the tag.
- 4 In the **Note** text box, enter any information you want to add about the tag.
- 5 Click **OK**.

The tag appears in the **Tag** pane under the category or subcategory you selected. To attach a tag to a photo, drag the tag from the **Tag** pane onto the photo in the photo well.

To find your photos, double-click a tag in the **Tag** pane; the search finds all photos that have that particular tag attached.

To narrow the range of photos and jump to a particular month, click the bar in the timeline.

If you create a new album on the device, add photos in it, and transfer the photos to Starter Edition, the album information shows as a new tag under **Imported tags**.

Fix your photos

To fix the most common photo problems:

- 1 Select a photo in the photo well.

- 2 Click **Fix photo** in the shortcuts bar. Starter Edition makes a copy of the original photo file for editing.
 - To fix the photo automatically, select **Auto Smart Fix**.
 - To fix the photo manually, select **Fix Photo Window...**, and from the following:
 - General**—Selects auto correction for color, levels, contrast, or sharpening.
 - Crop**—Crops a photo to improve the composition or add emphasis to an image.
 - Red Eye**—Corrects the red-eye effect caused by a camera flash.

Play and edit your videos

To play your videos, double-click the video file, and click **Play** under the video window.

To edit, rearrange, and delete scenes in your mobile movies:

- 1 Right-click a movie file, and select **Edit Mobile Movie**. You see the first frame of your video in the video window. The blue marker in the timeline below the video window indicates the frame you are viewing.
- 2 To play, pause, stop, go to the beginning, or go to the end, use the control buttons below the video window. To move through the video, drag the blue marker in the timeline.

- 3 To select a section of the video to edit, rearrange, or delete, do one of the following:
- Drag the selection handles that are located at the beginning and end of the timeline.
 - To mark the start time of the selection, press and hold Shift, and click in the timeline. To mark the end time, press and hold Ctrl, and click in the timeline.

After you have selected a section, you can drag the selection bar in the timeline.

- 4 To delete the selected section of the video, click the **Delete** button in the toolbar.

To crop the selection and delete the parts outside it, click the **Crop** button in the toolbar.

To copy the selection and paste it to another point in time, click the **Copy** button in the toolbar. Drag the blue marker in the timeline to the desired point, and click the **Paste** button.

More information

For additional help on the program functions, select **Help > Adobe Photoshop Album Help** in the main menu.

For more information on Starter Edition, visit www.adobe.com/products/photoshopalbum/starter.html.

Notes

Notes

Notes

Notes